

# **SPV E610 User Manual**

## Special features

- Internet Explorer (page 95)
- Built-in ActiveSync to synchronize with PC (page 58)
- Windows Media Player (page 106)
- Supports Outlook E-mail (page 75)
- Amusing games (page 124 )
- Supports MicroSD card (page 19)
- Supports Voice Notes (page 104)
- 2 mega pixel camera (page 115)
- Supports video capture (page 115)
- Supports Internet sharing (page 98)
- Supports Speed Dial (page 35)
- Supports MMS message (page 70)
- Supports Java (page 124)
- Supports Pocket MSN (page 81)

# Declaration

Congratulations on the purchase of your new Windows Mobile™ Smart phone!

## COPYRIGHT INFORMATION

Microsoft, MS-DOS, Windows, Windows NT, Windows Server, Windows Mobile, ActiveSync, Excel, Internet Explorer, MSN, Outlook, PowerPoint and Word are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Bluetooth is the registered trademark of Bluetooth SIG Inc.

JAVA is the registered trademark of Sun Microsystems, Inc.

**Please Read Before Proceeding.**

THIS DEVICE IS NOT CHARGED WHEN YOU TAKE IT OUT OF THE BOX.

DO NOT REMOVE THE BATTERY PACK WHEN THE DEVICE IS CHARGING.

WHEN INSERTING YOUR SIM CARD, MAKE SURE THE DEVICE IS POWERED OFF, AND THAT THE SIM CARD SNAPS INTO THE SOCKET SECURELY.

YOUR WARRANTY IS INVALIDATED IF YOU OPEN OR TAMPER WITH THE DEVICE'S OUTER CASING.

## PRIVACY RESTRICTIONS

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your phone.

## RELATIVE INSTRUCTION

Some functions referred to in this guide also need the support of a network operator or service provider. If you are unable to confirm whether you will be able to use certain functions or services with this phone, please consult your network operator or service provider.

The phone may include some commodities, technology or software that is controlled by export law, Chinese regulations and regulations governed by other countries or areas.

In order to ensure your safety, please read the “Safety Notice” and “Safety Precaution”.

Typographic conventions used in this user guide include:

<>: shows function key;

“”: shows important information on the phone interface;

[ ]: shows the phone menus.

## Limited Warranty

Amoi Mobile Phones ("Amoi") warrants that this Amoi cellular product and/ or genuine Amoi accessory (except battery packs) is free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the cellular phone, data product and all genuine Amoi accessories (except battery packs) extends for the first twelve (12) months beginning on the date of purchase of the Product.
2. The limited warranty extends only to the original consumer who purchase ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end user.
3. The limited warranty extends only to Consumers who purchase the product in one of the countries (or areas) set forth at the end of this document. The limited warranty is only valid in Amoi's intended country (or area) of sale of the Product.
4. During the limited warranty period. Amoi and its authorized service network will repair or replace, at Amoi's option, any defective Product or parts thereof with new or factory rebuilt replacement items, and return the Product to the Consumer in working condition. No charge will be made to the Consumer for either parts or labor in repairing or replacing the Product. All replaced parts, boards or equipment shall become property of Amoi. The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
5. Repaired Product will be warranted for the balance of the original warranty period or for ninety (90) days from the date of repair, whichever is longer.
6. Upon request from Amoi or its authorized service center, the Consumer must provide purchase receipt or other information to prove the date and place of purchase.
7. Transportation, delivery and handling charges incurred in the transport of the

Product to and from Amoi or its authorized service center will be borne by the Consumer.

8. The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:

- (a) The Product has been subject to: abnormal use, abnormal condition, improper storage, exposure to moisture or dampness, exposure to excessive temperature or other such environmental conditions, unauthorized modifications, unauthorized connections, unauthorized repair including but not limited to use of unauthorized spare parts in repairs, misuse, neglect, abuse, accident, alteration, improper installation, Acts of God, spill of foods or liquids, maladjustment of customer controls or other acts which are beyond of reasonable control of Amoi, including deficiencies of consumable parts such as fuses and breakage or damage to antennas, unless caused directly by defects materials or workmanship, and normal wear and tear of the Product.

- (b) Amoi was not notified by Consumer of the alleged defect or malfunction of the Product during the applicable limited warranty period. Please turn overleaf  
Invoice number  
Name of sub dealer.

- (c) The Product serial number or the accessory date code has been removed, defaced or altered.

- (d) The defect or damage was caused by defective function of the cellular system or by inadequate signal reception by the external antenna.

- (e) The Product was used with or connected to accessory not supplied by Amoi, not fit for use with Amoi cellular phones or used in other than its intended use.

- (f) The battery was short circuited or seals of the battery enclosure or cells are broken or show evidence of tampering or the battery was used in equipment other than for which it has been specified.

9. If a problem develops during the limited warranty period, the Consumer should take the following step-by-step

procedures:

- (a) The Consumer shall return the Product to the place of purchase for repair or replacement processing.
- (b) If 'a' is not convenient, the Consumer may contact the Amoi's sole agent for the location of the nearest authorized service center.
- (c) The Consumer shall arrange for the Product to be delivered to the authorized service center. Expenses related to removing the Product from an installation are not covered under this limited warranty.
- (d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer shall be responsible for expenses related to reinstallation of the Product.
- (e) In case of certain operator specific features in the Product such as SIM-lock, Amoi reserves the right to refer the Consumer to the relevant cellular operator before service will be provided.

- (f) If the Product is returned to Amoi after the expiration of the warranty period, Amoi's normal service policies shall apply and the Consumer will be charged accordingly.
- 10. ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING WRITTEN WARRANTY. OTHERWISE, THE FOREGOING WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. AMOI SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR A LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OR IMPAIRMENT OF PRIVACY OF CONVERSATIONS, WORK STOPPAGE OR LOSS OR IMPAIRMENT OF DATA ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT.
  - 11. The benefits conferred by this limited warranty are in addition to all other rights

and remedies under any applicable mandatory legislation as may be in force from country (area) to country (area).

12. Amoi neither assumes nor authorizes any authorized service center or any person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.
13. All warranty information, product features and specifications are subject to change without notice.
14. The countries (or areas) in which this limited warranty is in force, subject to clause 4 above, is UK.



# Content

<b>Safety notice .....</b>	<b>X</b>	Status icon and program introduction .....	23
<b>1.Getting Started.....</b>	<b>12</b>	Using the Quick List.....	27
Getting to know your phone and it's accessories .....	12	Entering menu .....	28
Front view of your phone.....	12	To scroll to enter menu function.....	28
Side view of your phone.....	12	To enter a menu by using speed dial .....	28
Rear view of your phone .....	13	Entering information .....	28
Accessories.....	13	To change input modes.....	28
Key functions .....	14	To use Fn input mode .....	29
To use shortcut keys .....	16	To use <u>Fn</u> input mode .....	29
Installing the SIM card and battery.....	17	To use abc input mode.....	29
Installing the Micro-SD card .....	19	To insert symbol.....	29
Battery charging.....	20	<b>2.Using Call Function .....</b>	<b>30</b>
To charge the phone using the travel charger .....	20	Making a call .....	30
The Home Screen.....	21	To make a call from the Home screen .....	30
Power on/ off.....	22	To make a call from contacts .....	30
		To make a call from call history.....	31
		To make a call from text messages .....	31

To make a call from speed dial .....	31
Receiving a call.....	31
To answer and reject a call .....	31
To end a call.....	32
In-call options .....	32
To make two calls simultaneously (this must be supported by the network) .....	32
To switch between two calls (this must be supported by the network) .....	32
To make a conference call (this must be supported by the network) Conference call	32
To mute a call.....	33
To turn the speakerphone on and off .....	33
To save the current caller to your contacts list .....	34
Additional dialing information.....	34
To make an emergency call .....	34
To make an international call .....	34
To dial a voice mail.....	34

Using speed dial.....	35
To create a speed dial number for a contact .....	35
To create a speed dial number for a menu .....	36
To make a call from speed dial.....	36
To enter a menu by using speed dial.....	36
Managing call history .....	36
To view call history list .....	36
To send text message or email from call history.....	37
To save a phone number to contacts.....	37

### **3. Personalising Your Phone ..... 39**

Customising the tones of events or actions....	39
To change the current profile .....	39
To edit a profile .....	39
To copy a sound to your phone .....	39
To set the sound for an event .....	40
To adjust the volume of the ring tone.....	40
To set sound for the Key sound .....	41


Setting the Home screen Set .....	41
To customise the Home screen .....	41
To set a picture as the wallpaper .....	42
Setting date, time and alarm .....	42
To set date and time .....	42
To set an alarm.....	42
Changing the regional settings.....	43
Setting owner information .....	43
Changing the accessibility settings .....	44
Enabling error reporting .....	44
Setting the calls.....	45
To use call divert .....	45
To use call barring .....	45
To use call waiting .....	46
To use fixed dialling .....	46
To hide your phone number.....	46
Setting the network .....	47
To select the network service .....	47

Setting connections .....	47
To use wireless manager .....	47
To receive incoming beams .....	48
To set bluetooth .....	48
To set multiple network connection .....	49

#### **4.Managing Your Phone .....50**

Managing files .....	50
To copy a file using ActiveSync.....	50
To use file explorer.....	50
To chang the display of the file .....	51
To send a file via messaging or bluetooth...51	
Folder options.....	52
Using task manager.....	52
To start task manager(including refresh)....52	
To stop applications .....	53
Power Management .....	53
To check the battery power.....	53
To optimise the power performance.....	53

Viewing the phone and system information ...	54	To synchronise via bluetooth .....	64
To view memory details.....	54	To solve ActiveSync connection problems..	65
To find the phone specification.....	54	<b>6.Exchanging Messages .....</b>	<b>68</b>
Protecting your phone.....	55	Using text messages.....	68
To enable or disable the phone lock .....	55	To view and edit text messages service center .....	68
To enable or disable SIM PIN .....	55	To enable request delivery notification .....	68
To change PIN .....	56	To write and send messages.....	69
To lock or unlock the keypad.....	56	To receive messages(including reply\ forward) .....	69
Removing programs .....	56	Using MMS messages .....	70
Resetting your phone.....	57	To configure MMS settings .....	70
<b>5.Synchronising Information .....</b>	<b>58</b>	To write and send MMS messages.....	72
Connecting your phone to your PC(USB mass storage) .....	58	To create an MMS message from a template .....	73
Using ActiveSync .....	58	To add predefined text to an MMS message .....	73
About ActiveSync.....	58	To view and reply to MMS messages .....	74
To set up ActiveSync.....	59	Using email .....	75
To start and stop synchronisation.....	60		
To install software in the phone through c..	64		

To set up a POP3/IMAP4 email account ....	75	To change your display name .....	85
To write and send email .....	77	To sign out .....	85
To receive email(Including download) .....	78	Hotmail .....	85
To reply or forward an email.....	78	MSN Mobile homepage .....	86
To individually sign and encrypt a new .....	79	<b>8.Using Contacts.....</b>	<b>87</b>
To set digital signature for an email.....	79	Adding a new contact .....	87
Managing folders .....	80	To add a new contact on your phone.....	87
To access messages folders .....	80	To add a new contact on your SIM card.....	88
Message folders.....	80	Searching for a contact.....	88
<b>7.Pocket MSN .....</b>	<b>81</b>	Viewing and editing a contact.....	89
Setting an account .....	81	To assign a ringtone to a contact .....	89
To sign in MSN Messenger .....	82	To assign a picture to a contact .....	89
To send a MSN message .....	82	Sending a text message, MMS to a contact ..	90
To end a chat.....	83	To send a text message to a contact .....	90
To invite another contact to join in chat .....	83	To send an MMS to a contact .....	90
To block or unblock a contact.....	84	 Making a call to the selected contact.....	90
To delete a contact .....	84	Sending the contact's information.....	91
To change your own Messenger status .....	84	To send the contact's information via text	

message .....	91	Using Internet sharing .....	98
To send the contact's information via Bluetooth.....	91	To set up the phone as a modem .....	98
To send the contact's information via MMS .....	91	To connect to the Internet.....	99
Managing the contacts.....	92	To deactivate Internet sharing .....	100
To delete a contact.....	92	<b>10.Using Tools .....</b>	<b>101</b>
To copy contacts between SIM card and the phone.....	92	Using task .....	101
To filter the contact list .....	92	To create a task on the phone .....	101
<b>9.Connecting to the Internet .....</b>	<b>93</b>	To beam a task .....	101
Setting up a connection .....	93	To delete a task .....	101
To set up a GPRS connection .....	93	To mark a task as completed.....	102
To set up a Dial-up connection.....	94	To sort and filtering the task list .....	102
Using advanced options .....	94	Using calculator.....	102
Adding a URL exception .....	95	Using calendar .....	103
Using Internet Explorer.....	95	To view your schedule .....	103
To browse a Web page .....	96	To create a new appointment .....	103
To use Favourite .....	97	To send a calendar appointment .....	104
To clear temporary files, cookies or history .....	98	Using voice notes.....	104
		To record voice notes .....	104

To play voice notes.....	104	To play a video clip in full screen .....	114
To delete a voice note .....	105	Using camera and video recorder.....	115
To set a voice note as a ringtone.....	105	To enter the Camera and Video Recorder preview .....	115
<b>11.Using Multimedia .....</b>	<b>106</b>	Camera and Video settings .....	115
Using Windows media player .....	106	To change the storage location of photos and videos .....	117
Controls of Windows Media Player .....	106	To include audio when recording video files .....	117
The screens and options of Windows Media Player .....	107	To include audio when recording video files .....	117
To add files to play list .....	110	To take pictures and video clips .....	118
To remove a file from play list.....	110	To send the captured photo or video clips	118
To play music and videos on your phone ..	111	To beam the captured photo or video clips	118
To play music and videos on a network.....	111	To set the captured photo as Home Screen .....	119
To change Player appearance.....	112	To edit the captured photo or video clips ..	119
Using video player .....	112	To delete the captured photo or video clips .....	120
To play a video clip.....	113	To view the stored photos and videos.....	120
To rename a video clip .....	113		
To delete a video clip.....	114		
To move a video clip between the phone and storage card .....	114		

Using pictures&videos .....	120	Making your phone discoverable.....	127
To view pictures .....	120	Connecting a Bluetooth device to your phone	
To view the pictures in slide show .....	121	.....	127
To play videos .....	121	To search Bluetooth devices .....	127
To edit a picture .....	121	To match the found device .....	128
To delete a picture or video clip .....	122	To accept a Bluetooth partnership.....	128
To set a picture as Home Screen .....	122	To change the display name of a bluetooth	
To send pictures and video clips via MMS or		device .....	129
Email.....	123	To delete a bluetooth device.....	129
To beam pictures .....	123	Connecting a Bluetooth earphone to your phone	
To set a picture as a contact image.....	123	.....	130
Playing games .....	124	Sending files via Bluetooth .....	131
Using Java .....	124	Receiving files via Bluetooth .....	131
To manage Java programs .....	124	<b>13.Phone Maintenance.....</b>	<b>133</b>
To view information about Java program .	125	<b>14.Troubleshooting .....</b>	<b>135</b>
To select the network type .....	125	The phone can't be switched on.....	135
<b>12.Using Bluetooth .....</b>	<b>126</b>	The phone is switched off automatically.....	135
Turning Bluetooth on or off .....	126	PIN/ PUK code lock.....	136
		Bad call quality .....	136



Can't answer a call.....	137	Password access.....	144
Can't make a call .....	137	Phone password.....	144
The call volume is too low .....	138	PIN code.....	144
The person you are calling cannot hear your voice .....	138	PIN2 code.....	144
The incoming call doesn't ring.....	138	PUK code .....	145
The battery can't be charged .....	139	PUK2 code .....	145
Can't display network.....	140	Note about charging the battery .....	145
The phone does not recognize the storage card .....	140	Battery information and care .....	146
Browser can't connect to Internet normally ..	141	Note about using spare parts.....	147
Lack of space.....	141	Other safety information .....	148
<b>15.Safety Precaution .....</b>	<b>142</b>		
Usage environment.....	142		
Medical devices .....	142		
Pacemaker .....	142		
Hearing aids .....	143		
Emergency calls.....	143		
Making an emergency call.....	143		

## Safety notice

Before using the phone, please read and follow the rules below carefully. For the detailed information, please refer to the "Safety precaution" section on page 142.



If you dial or answer a call while driving, please use the hands-free device (e.g. earphone, vehicle hands-free system, phone hands-free system) or use your phone after parking the vehicle.



The phone may interfere with the communication network of aeroplanes, so please make sure your phone is switched off during the flight.



All phones can be subject to interference, which could affect its performance.



Please switch off your phone where you see signs forbidding phone use. Such signs can be found in medical centres or establishments containing medical equipment.



In order to ensure high performance and to avoid damage the phone, please use the original accessories and battery. Avoid using products which are not compatible.



To avoid the risk of any explosion, please switch off the phone at petrol stations and places which are near fuel, chemical solvent or other dangerous substances.



Please switch off your phone in areas where there could be a risk of explosion and in areas where you are asked to switch off bidirectional radios. Pay attention and adhere to any rules and regulations concerning mobile phone use.



Please neither burn the phone battery nor use it as ordinary rubbish, as this could endanger life and damage to the environment. Please obey the environmental policy of the local government and dispose of and recycle them in time.



If you need to connect your phone to other devices, please read the user guide carefully to ensure the procedure is carried

out safety.



Keep small parts (e.g. SIM card) out of the reach of children to prevent batteries from being swallowed or causing other dangers.



Please back up the important information of phone and be sure to have a second copy in case data is lost from your phone.



Make sure the phone is switched on and has service coverage before inputting the emergency number. Press the call key for your position to be located. Please don't end call unless told to do so.

# Getting Started

---

## 1. Getting Started


### Getting to know your phone and it's accessories

---

#### Front view of your phone



#### Side view of your phone

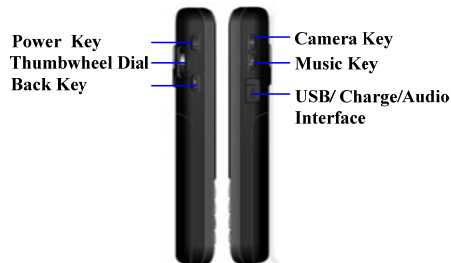

### Rear view of your phone



#### **Caution:**

*For additional information about using shortcut key operations for the above functions, see “To use Shortcut Keys” on page 16.*

### Accessories

This package should include all items:



**Orange SPV E610  
CD**



**Getting Started**



**Battery**



**Travel Charger**

## Getting Started






**Data Cable**

If any are missing or different, immediately contact the retailer where you purchased the device.












### Key functions

Key	Function
...	Press to access the Main menu

...	<ol style="list-style-type: none"><li>1. While using menu functions, press the key to select menu option</li><li>2. Press the key from the Home Screen to enter Contacts list</li></ol>
<b>Navigation Key</b>	Press left, right, up and down to scroll through menus; press the center of the Navigation key to select an item
	Press to return to the Home Screen
	After entering the Menu screen, press the key to return to the last operation screen or Home Screen
	<ol style="list-style-type: none"><li>1. While on a call, press the key to end the current call</li></ol>

## Getting Started


	2. Press and hold the key from the Home Screen to lock the keypad, while pressing  and  to unlock it
	1. Press to answer or make a call 2. Press the key from home screen to enter Call History screen
	Press and hold to turn the device on/off
<b>Thumbwheel Dial</b>	During a call, scroll to adjust volume
	Press to enter the Menu screen, or to return to the previous screen or Home Screen
	1. While editing, press briefly to delete the last






	entered character (letter, number, symbol or space); 2. While editing, press and hold to quickly delete characters (letters, numbers, symbols& space)
	While editing, press the key to switch between input modes
	<b>Caps Shift Key:</b> Press this key and a letter key at the same time to type a single uppercase letter
	<b>Symbol Key:</b> Press to access Symbol Menu
<b>USB/ Charge/Audio Interface</b>	USB Port for Charging and Audio support

## Getting Started



### To use shortcut keys

Pressing some keys directly from the Home Screen provide direct access to common phone functions. The following table lists the operations and functions of some common shortcut keys

Key	Operation	Function
	Press briefly	During a call: 1. Answer the second call while putting the first call on hold 2. Switch between two calls answered at the same time 3. While answering or dialing calls, activates call holding function 4. While on a call, press and hold to activate the speaker

		phone
	Press briefly	Enter the Quick List
	Press briefly	Access the Library Screen
	Press briefly	<b>Camera Key:</b> 1. Launch the camera 2. If already running, press to capture an image or start recording a video clip
	Press briefly	<b>Messaging Key:</b> Access the messaging application
	Press briefly	<b>Calendar Key:</b> Access the calendar application




		Enter the Wireless Manager screen.
---	---	------------------------------------

### Installing the SIM card and battery

Before using the phone, please insert a SIM card supplied by a network service provider. The SIM card (Subscriber Identification Module) includes phone number and detailed information of service items, and can be used to store phone number and user information.

#### ***N.B.***

***SIM card and its contacts can be easily damaged by scratching or bending, so be very careful when inserting or removing the card. Please follow the instructions of SIM card user guide provided by the manufacturer and keep SIM card out of the reach of children.***

- (1) Press and hold the Power Key  for several seconds to switch off the phone.
- (2) As shown in the following diagram, slide the battery cover in the direction of the bottom of the phone and then remove it and battery.



- (3) Slide the SIM card into the SIM card slot. Press the card downwards while inserting and make sure the card is facing the correct way, as shown in the following image (with the contact point facing down).

## Getting Started

---



- (4) Make sure the battery contacts are facing into the phone, and then push the other side of the battery gently until it fixes itself in the battery slot.



- (5) Make sure the battery has been installed correctly, and then slide the battery cover in the direction of the top of the phone until it is covered, as shown below:



***N.B.***

***Don't insert or remove the SIM card when the phone is switched on or getting charged, or this may damage the SIM card.***




### Installing the Micro-SD card

---


A MicroSD card is a removable storage card

that can be used to increase phone memory.

- (1) Make sure the side with the golden contacts is facing down and insert the narrower end of card.
- (2) Push the card gently until it is fixed in the battery slot. See the following images for additional information.

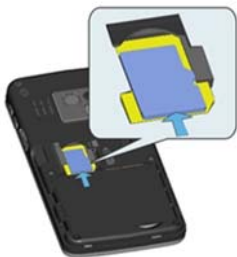

When successfully installed, the MicroSD card sits on top of the SIM card.

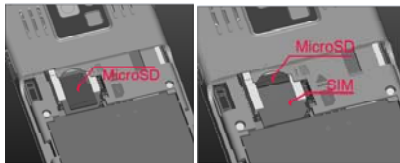

To remove the MicroSD card, gently push it toward the phone, and the card will automatically eject from the card slot.

**N.B.**

- 1. Don't forcefully remove the MicroSD card from the card slot.**
  - 2. During the process of reading and writing to the MicroSD card, do not remove or insert the card.**
- Orange will take no responsibility for the following situations including, but not limited to, lost data or damage to the card damage.**

## Getting Started

---


### Battery charging

---

E610 is powered by a rechargeable Li-ion battery.

#### To charge the phone using the travel charger

- (1) Install the battery in the phone.
  - (2) Insert the lead of the travel charger to USB slot of phone carefully
  - (3) Connect the charger to a standard wall outlet.
- ❖ To view charging process and status, select [**Start**→**More**→**Settings**→**More...**→**Power Management**]
  - ❖ While the phone is switched off, the battery bar will scroll and you can view charging process.

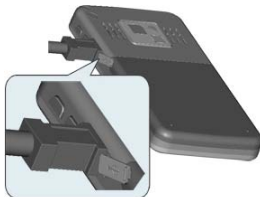

- (4) When charging is complete, disconnect the charger and standard power socket first, and then disconnect the phone and charger.

#### *N.B*

- 1. If the battery is empty, the battery icon will appear after charging for two to three minutes. Generally, the charging time is 2-5 hours depending on the status of the phone (whether switched on, making a call etc.)*
- 2. For optimal battery performance, charge and discharge the new battery two or three times. The*


*first several times you charge the battery, charge it for at least 10 hours. You should immediately recharge the phone when it turns off due to no battery power.*

*3. Please use the approved battery and charger designated for this product, otherwise it may cause explosion. Try to avoid using USB cable to charge.*



### The Home Screen

The Home Screen displays important information, such as upcoming appointments, status indicators, the current time, date and profile, and icons for frequently used programs. You can open a program directly by selecting its icon and pressing the center of the Navigation key.

- ❖ To access the Home Screen from anywhere, press .
- ❖ To access the Home Screen display setting, including the background, select **[Start→**



**More→Settings→Display→Home Screen].**

The Home Screen consists of the following five areas.




Area	Function
Status Bar	Indicates your phone's current status, such as the battery and signal strength. For more details about status icons, please see the next page.
Information Display	Displays information including the network service provider, current time and date, and


## Getting Started

Area	recent appointments. Press the Navigation Key  up or down to select your desired option then press the center of the Navigation Key  to enter the corresponding function.
Start Menu	Press the Left Soft Key <b>•••</b> to open the start menu and switch to a program
Function Key Bar	Press the Right Soft Key <b>•••</b> to open <b>[Contacts]</b>

### Power on/ off

Press and hold the Power Key  to switch the phone on/off.

❖ If no SIM card is inserted when powered on,

the phone will show the icon as .

❖ If the PIN code is activated, your phone will be connected to a GSM network upon entering the correct PIN code.







*N.B.*










*1. If you enter the wrong PIN code three times in succession, you will need a PUK code in order to unlock your phone. If you input wrong PIN code ten times in succession, SIM card will be locked forever. Generally PUK code is supplied with SIM card. If you lose your PUK code or PUK code isn't supplied with SIM card, please contact your network operator.*

*2. The phone is equipped with an antenna. When power is on, please do not touch antenna as this may affect call quality and require phone to consume more power*











*3. Don't switch the phone on in areas where wireless phone use is prohibited or where it may cause interference or danger. Make sure that your phone's "Alarm and clock" function is not activated.*

### Status icon and program introduction



Icon	Function description
	<b>Signal Strength:</b> Represents the current network signal.
	You are out of a service area
	<b>Battery Status:</b> Represents the level of your battery.
	<b>Low Battery :</b> Displays when there is little battery power
	Phone is charging
	<b>Switch off phone function:</b> The phone functions are turned off if needed but you can still use the other functions: such as Camera, Calendar, Games, Windows Media

	<b>Alarm Clock:</b> Appears when the alarm clock is activated.
	No SIM card inserted
	Appears during a call.
	Speakerphone on
	Microphone muted
	<b>Ringer off:</b> Appears when the profile is set as <b>[Headset]</b> . For more details, please see “To edit a profile” on page 39.
	<b>Vibrate call alert:</b> Appears when the profile mode is set as <b>[Conference]</b> .
	Call holding
	Call forwarding

## Getting Started






	Missed call icon appears in [ <b>Call History</b> ] menu
	Outgoing call
	Incoming call
	Missed call icon appears on the Home Screen.
	New e-mail or text message
	New voice message
	EDGE available
	EDGE connected
	Data call in progress
	<b>Bluetooth</b>





The following table lists the icons for programs already installed on the E610.

Icon	Name	Introduction
	Call History	Keeps track of all phone calls made, received and missed.
	Address Book	Keeps track of contact information and lets you create speed dial entries for dialing frequently -called phone numbers or for opening frequently -accessed programmes









## Getting Started

	Organiser	Keeps track of your schedule, tasks and appointments and allows you to make short voice recordings
	Settings	Personalises your phone to suit the way you use it.
	Messaging	Lets you send and receive MMS, e-mail and text messages.
	ActiveSync	Synchronises information between your phone and PC
	Internet Explorer	Allows you to browse Web pages, and to

		download new programs or files from Internet
	Camera	Capture photos in various modes
	Video Player	Allows you to play a locally stored clip on your device, or play media content from a remote server
	Windows Media	Lets you play back video and audio files.
	Pictures & Videos	Collects, organises, and sorts picture and video files in the My Picture folder on your phone or

## Getting Started


		on a storage card.
	Calculator	Allows you to perform basic mathematical operations such as addition, subtraction, multiplication, and division.
	File Explorer	Lets you organise and manage files on your phone
	Games	Lets you play two games: Bubble Breaker and Solitaire coming with your phone.
	Java	Lets you operate Java-based


		applications or Java games on your phone.
	Comm. Manager	Allows you to speed enter the wireless manager function
	Accessories	Checks here for a download agent wireless modem and more




### Using the Quick List

The Quick List offers convenient access to a list of functions, such as locking your phone or keypad and choosing a different profile.

- (1) Briefly press the Power Key  (press and quickly release).

- (2) Scroll through the list and select the desired item by pressing the Left Soft key \*\*\* **<Select>**, pressing  or pressing the related numeric key on the keypad.

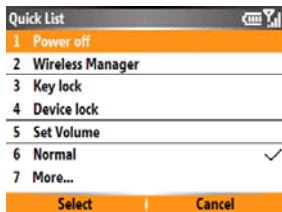





- (3) To exit the Quick List at any time, press the Right Soft key \*\*\* **<Cancel>**.




### Entering menu

The E610 mobile phone provides you with a wide variety of functions. These functions are arranged in the form of menus and you can look at, use or set each menu as required.

### To scroll to enter menu function

- (1) Press the Left Soft Key \*\*\* from the Home Screen to enter the main menu. Press the Navigation Key  up, down, right or left to move to your desired menu, and then press the center of the Navigation Key  to access this menu. Select **<More>** to view the next menus.
- (2) If there are sub-menus, press the Navigation Key  up or down to select the desired one then press the center of the Navigation Key  to enter it.

### To enter a menu by using speed dial

- (1) Select [**Start**→**Address Book**→**Speed Dial**] from the Home Screen.
- (2) Enter the Speed Dial List then press the Navigation Key  up or down to select the menu that you want to access. Select [**Menu**→**Run**], and then you can enter the

## Getting Started

---

menu function.




### Entering information

---

The E610 supports input modes that feature a strong, intelligent word-building capacity.

#### To change input modes

To switch between input modes while editing, repeatedly press . The input mode Icons will appear in the upper right corner of the screen.

#### To use Fn input mode




Press the corresponding key to enter your desired number or symbol labeled on the upper side of the key.

#### To use Fn input mode



Press the corresponding keys to enter your desired numbers or symbols labeled on the upper side of the keys.


#### To use abc input mode

Press the corresponding keys to enter your desired English letters labeled on the lower side of the keys.

- ❖ Press  to enter Capitalization status. This allows you press the corresponding key to enter its capital letter. To exit Capitalization, press  again.
- ❖ Press and hold  and press the key labeled with the required letter, so you can enter the corresponding capital letter. (Once in capitalization status, you can enter its small letter).

#### To insert symbol

- (1) Press  to access symbol menu.
- (2) Press the Navigation Key  up, down, right or left to move to your desired

symbol, and then press the center of the  
Navigation Key  to insert.

## Using Call Function



---

### 2. Using Call Function


#### Making a call


---

##### To make a call from the Home screen



- (1) From the Home Screen, access the Phone Screen by pressing the SEND Key  or by pressing the numeric keys on the keypad.
- (2) After entering the phone number, press the SEND Key .

##### *N.B.*




*When you press a numeric key on the keypad, a list of names and numbers appears as the phone automatically searches Contacts, Call History, Speed Dial and your SIM card to find a matching name or number. For example, when you press a number such as  (including the number “1” and the letter “E”), the names that begin with E will be displayed as well as phone numbers that begin with*

*1. The next number you press continues to narrow the search. When you see the name of the person you want to dial, select it and press the SEND Key .*



##### To make a call from contacts

- (1) Press the Right Soft Key **...** or select **[Start→Address Book→Contacts]** from the Home Screen to enter the Contacts screen.
- (2) Do one of the following:
  - ❖ Select the desired contact, and press the SEND Key .
  - ❖ Select the desired contact in the contact list, and press the center of the Navigation Key  twice (once to view the contact details, and once to dial the associated number).

### To make a call from call history

- (1) Press the SEND key  or select [Start→Call History] from the Home Screen.
- (2) Select your desired number.
- (3) Press the center of the Navigation Key  twice or press the SEND key .

### To make a call from text messages

- (1) Select the desired number from a text message
- (2) Press the SEND key  to dial.
- (3) The system asks you confirm whether the number is correct or not. After confirming, press the Left Soft Key **...** or the SEND key  to dial the number.

### To make a call from speed dial

- (1) Create a speed dial number for the desired contact, for more details; please refer to "Using Speed dial" on page .
- (2) Pressing and holding down the corresponding numeric key. The phone will automatically dial the number.
- (3) If you set a number with two digits, input the first digit, then press and hold down the second number. For example, if you set 12 as a speed dial number, you could input the first digit "1" before holding down the second digit "2."



### Receiving a call

---

#### To answer and reject a call


When you receive a phone call, you have the option to answer it or ignore it.

❖ To answer the call, you can press the SEND








## Using Call Function

---

key  or the Left Soft Key ... <Answer>.

- ❖ To ignore the call, you can press the END Key  or the Right Soft Key ... <Ignore>.
- ❖ To set your phone to Auto Answer-in, from Standby Mode with the headset inserted into your phone, click [**Start**→**Settings**→**Profiles**→**Headset**]. Click [**Menu**→**Edit**] to set the time for [**Auto answer-in**].

*N.B.*

*If you select [Start →Settings →Phone→Call Options] and activate [Any key answer] option, then you can press any key to answer phone except the End Key , the Right Soft Key ... , the Power Key , the Home Key , the Clear/Back Key , the Back Key , the Music Key  or the Camera Key .*

### To end a call

Press the END Key  to end a call.



### In-call options

---

#### To make two calls simultaneously (this must be supported by the network)

Click [**Menu** → **Hold**]. You can place the current call on hold and dial another phone number at the same time.

#### To switch between two calls (this must be supported by the network)

To switch between the two calls, click [**Menu**→**Swap**]. The side that is on hold cannot hear the other conversation.

When you end one call, the other call is activated automatically.



### To make a conference call (this must be supported by the network) Conference call


The E610 phone enables the user to make a conference call with up to five callers.

- (1) Either put a call on hold and dial a second number, or answer a second incoming call during a call.
- (2) Click [**Menu** → **Hold**] and click [**Menu** → **Conference**].

*N.B*

*1. If the conference connection is successful, the word “Conference” appears at the top of the screen.*

*2. To add more people to your conference call, select [Menu→Hold], enter the phone number, then select [Resume] to return to the call.*

- (3) To end the conference call, press the END Key  and select the desired number to

disconnect.

### To mute a call

You can turn off the microphone during a call, so that you can hear the caller but the caller cannot hear you.

During a call, click [**Menu**→**Mute**].

When the microphone is turned off, the icon




appears on the screen.

click [**Menu**→**Unmute**] to turn on the microphone again.

### To turn the speakerphone on and off

During a call, you can talk handsfree or let other people listen to the conversation.

- ❖ Select [**Menu** → **Speakerphone On**], the icon  appears at the top of the screen.
- ❖ To turn off the Speakerphone during the call, click [**Menu** → **Speakerphone Off**].

## Using Call Function

---

*N.B.*

*To avoid damage to your hearing, do not hold your phone against your ear when the Speakerphone is turned on.*


### To save the current caller to your contacts list

During a call, click [Menu→Save to contacts] to save the current contact to your Contacts List. If the contact is already saved to your phone, "View Contact" appears.

### Additional dialing information

---

#### To make an emergency call



- (1) Enter the appropriate emergency numbers for your location (such as 911).
- (2) Press the SEND key .

*N.B.*


*Additional emergency numbers may be included in*

*your SIM card. Contact your service provider for details.*

#### To make an international call

- (1) Press and hold  on the phone keypad until the "+" sign appears. The "+" replaces the 00 in the international prefix of the country that you are calling.
- (2) Enter the full phone number, then press the SEND key . The full phone number includes country code, area code (without the leading zero, if any) and phone number.

#### To dial a voice mail

Voice Mail is a system dependent feature. To activate Voice Mail from the Home Screen, press and hold . The system will automatically dial your voice mailbox. Contact your service provider for your voice mail access

phone number

*N.B.*


1. To set your voice mail number, select [Start→Settings→Phone→Call Options] then enter “Call Options.” Your voice mail number appears in the “Voice mail number” box.
2. Call waiting, call holding, and conference call are system dependent features. Contact your service provider for additional information.



### Using speed dial

---



#### To create a speed dial number for a contact

- (1) On the Home screen, click [Start→Address Book→Contacts].
- (2) Select a contact, then press the center of the Navigation Key  to view the contact details.

- (3) Select the desired phone number and click [Menu→Add to Speed Dial].
- (4) Enter the appropriate details in [Name], [Value] and [Keypad assignment].
- (5) Press the Left Soft Key \*\*\* <Done>, to quit at any time during this process, click [Menu→Cancel].

*N.B.*

1. While selecting the corresponding numeric key of speed dial in [Keypad assignment], the number

key  and  will be saved by system and can't be modified.


2. Speed dials can be created only for numbers that are stored in Contacts.

#### To create a speed dial number for a menu

- (1) On the Home screen, click <Start> to enter Main menu, then use the Navigation

## Using Call Function

---

Key  to select the menu you want to create a speed dial for.

- (2) Select [**Menu**→ **Add Speed Dial**].
- (3) Enter the appropriate details in [**Name**], [**Value**] and [**Keypad assignment**].
- (4) Press the Left Soft Key **\*\*\* <Done>** to save.

### To make a call from speed dial

If you have assigned a speed dial (in this example, the second location) to a contact in Speed Dial, you can simply press and hold



on the Phone keypad to dial the contact's number.

### To enter a menu by using speed dial

If you have assigned a speed dial (in this example, the second location) to a program in

Speed Dial, you can simply press and hold



on the Phone keypad to launch the program.



## Managing call history


---

Call History includes the entries for [**Incoming Calls**], [**Outgoing Calls**] and [**Missed Calls**].




You can only view Call History if you are subscribed to the service.

### To view call history list

On the Home Screen, select [**Start**→**Call**

**History**] or press the SEND Key  to view the call history list.


Different icons appear for different types of calls. For more details, see the following table.


Icon	Introduction	Icon	Introduction
	Incoming calls		Missed Calls
	Outgoing calls	—	—

*N.B.*



*If a phone number in the Call History is saved to your Contact List, the name and the number will display. If it is not in your Contact List only the phone number displays.*

### To send text message or email from call history

- (1) On the Home Screen, select [**Start→Call History**] or press the SEND Key  to view the call history list.

- (2) Press the Navigation Key  up or down to select the desired call entry.
- (3) Click [**Menu→Send Text Message**].
- (4) Type a text message and click <**Send**> to send the message.

### To save a phone number to contacts

- (1) On the Home Screen, select [**Start→Call History**] or press the SEND Key  to view the call history list.
- (2) Press the Navigation Key  up or down to select the desired phone number.
- (3) Press the Left Soft Key **\*\*\* <Save>**, then select to save the number as a new contact or add it to the other contacts.
- (4) Click [**New Item**] and enter the relative information of the contact, or scroll to select the desired contact and click<**Select**>, then press the Left Soft Key

## Using Call Function

---

\*\*\* <Insert > to insert the phone number in the contact.

(5) After finished, click <Done>.

### 3. Personalising Your Phone

#### Customising the tones of events or actions


---

With your phone, you can make calls from the Home Screen, the Phone screen, from Contacts, Speed Dial, Call History, or SIM Contacts (contacts stored on your SIM card).

#### To change the current profile

- (1) On the Home Screen, click [**Start**→**Settings**→**Profiles**] to enter the Profiles screen.
- (2) Click the preferred profile, and click **<Done>**.

*N.B.*

*To quickly change the profile, briefly press Power Key  to display the Quick List, and click a profile.*

#### To edit a profile

- (1) On the Home screen, click [**Start**→**Settings**→**Profiles**] to enter the Profiles screen.
- (2) Click the preferred profile, and click [**Menu**→**Edit**].
- (3) Do one of the following:
  - ❖ Modify the settings, and click **<Done>**.
  - ❖ To cancel without saving changes, click **<Cancel>**.

*N.B.*

*To revert to the default profile settings, click [Menu → Reset to default].*

#### To copy a sound to your phone

You can connect your phone to PC with a USB data cable to download your favorite ringtones from your PC, then use the sound for various

## Personalising Your Phone

---

phone functions. To copy a sound from your PC:

- (1) Connect the phone to your PC by using a USB connection.

On your PC, copy the sound file you want.

In ActiveSync on your PC, select [**Explorer**] and double-click [**My Windows Mobile-Based Device**].

- (2) Do one of the following:

- ❖ To save the sound file on your phone, double-click [**Application Data**], double-click [**Sounds**] and paste the file into that folder.
- ❖ To save the sound file on your storage card, double-click [**Storage Card**], and paste the file into the folder you want.

### To set the sound for an event

- (1) On the Home Screen, click [**Start**→**Settings**→**Sounds**].

- (2) For the desired event, select a sound. Select [**None**] if you do not want to hear a sound.


- (3) When finished, press the Left Soft Key **\*\*\* <Done>**.

### N.B

*1. E610 only supports audio files with MIDI, MP3 or WMA formats. The audio files with the other formats can't be played.*

*2. After selecting a sound, the sound plays. To hear it again, select [Menu→Play].*

### To adjust the volume of the ring tone

- (1) On the Home screen, click [**Start**→**Settings**→**Profiles**] to enter the Profiles screen.
- (2) Select the profile to edit, and click [**Menu**→**Edit**].
- (3) In [**Ring volume**] option, press the Navigation Key  left or right to adjust



the ring volume. Select **[Off]** to turn off the ring tune.

- (4) When finished, press the Left Soft Key **••• <Done>**.

### To set sound for the Key sound

- (1) On the Home screen, click **[Start→Settings→Sounds]**.
- (2) In **[Keypad control]** option, select a sound. Select **[None]** if you do not want to hear any sound while pressing a key.
- (3) Click **<Done>**.



### Setting the Home screen Set

---


The Home screen is your starting place for most tasks. You can gain access to all features and programs from the Home screen. The centre of the Home screen can display your next appointment, the current profile, the number of new messages (voice mail, text

message, email or MMS) that you have received, and other important information.

### To customise the Home screen


- (1) On the Home screen, click **[Start→Settings→Home Screen]**
- (2) In **[Home screen layout]**, **[Colour scheme]**, **[Background image]**, and **[Time out]**, select the options you want, and click **<Done>**.

### To set a picture as the wallpaper

- (1) On the Home screen, click **[Start→More→Pictures & Videos]**.
- (2) Select the picture you want to set as the background. Click **<View>** or press the center of the Navigation Key  for a larger view of the image.
- (3) Click **[Menu → Use as Home Screen]**.

## Personalising Your Phone

---

- (4) Press the Navigation Key  up or down to select the portion of the picture you want to use, and click **<Next>**.
- (5) In **[Adjust the transparency]**, select a higher percentage for a more transparent picture or a lower percentage for a more opaque picture.
- (6) Click **<Finish>**.



### Setting date, time and alarm

---

#### To set date and time

- (1) On the Home screen, click **[Start→Settings→Clock & Alarm→Date and Time]**.
- (2) In **[Time zone]**, select your time zone.
- (3) In **[Date]**, edit the month, day or year.
- (4) In **[Time]**, edit the hour, minute and second.

- (5) Click **<Done>**.

#### To set an alarm

- (1) On the Home screen, click **[Start→Settings→Clock & Alarm→Alarm]**.
- (2) In **[Alarm]**, choose one of the following:
  - ❖ **Off:** to turn the alarm off.
  - ❖ **On:** to turn the alarm on.
- (3) In **[Alarm time]**, enter the time for the alarm to go off.
- (4) Click **< Done>**.



### Changing the regional settings

---

Your phone should already be set up with the regional settings that are appropriate for your locale.

You can specify the language, locale, date and

time style, as well as number and currency formatting options.

- (1) On the Home screen, click [**Start** → **Settings** → **More** → **Regional Settings**].
- (2) In [**Language**], select your preferred language.
- (3) In [**Locale**], select the locale for the language you selected. The Locale option automatically changes the format of the remaining options (such as date, time and currency) according to the locale you specify.
- (4) Click <**Done**>.

**N.B.**

*You must turn your phone off and on again for the changes to take effect.*



### Setting owner information

---

Entering and displaying owner information are

best practices; they allow someone to return the phone to you in case it is lost.

- (1) On the Home screen, click [**Start** → **Settings** → **More** → **Owner Information**].
- (2) Complete the following:
  - ❖ In [**Name**], enter your name.
  - ❖ In [**Telephone number**], enter a number where you can be reached.
  - ❖ In [**Email address**], enter your email address.
  - ❖ In [**Notes**], enter any other information you want to include.
- (3) Click <**Done**>.



### Changing the accessibility settings

---

In this option, you can set the system font size, the time for Multipress time out, confirmation

## Personalising Your Phone

---

time out and the alert volume while in-call.

- (1) On the Home screen, click [**Start** → **Settings** → **Accessibility**].
- (2) Select your preference for the following:
  - ❖ **System font size:** Set the size of the font that is displayed on the screen.
  - ❖ **Multiple press time out:** Set the length of time between key presses when entering text in Multipress mode.
  - ❖ **Confirmation time out:** Set the delay before an unconfirmed action times out.
  - ❖ **In-call alert volume:** Set the volume of sounds that play when you are in a call
- (3) Click <**Done**>.



### Enabling error reporting

---

- (1) On the Home screen, click [**Start** → **Settings** → **More** → **More** → **Error Reporting**].

- (2) Do one of the following:

- ❖ Select [**Enable**] to turn on error reporting.
- ❖ Select [**Disable**] to turn off error reporting.

- (3) Click <**Done**>.




### Setting the calls

---

#### To use call divert

Call Forwarding allows you to divert incoming calls to another number.

- (1) On the Home screen, click [**Start** → **Settings** → **Phone**].
- (2) Click [**Call Forwarding**] and select the preferred call forwarding type, for example: [**Unconditional**]. The following image displays the Call Forwarding options.

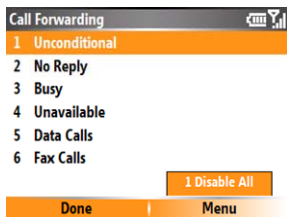

- (3) Click <Done>.

**N.B.**

*This function needs to be supported by your network and must be activated before using it. For more details, please check with your service provider.*

### To use call barring

This network service allows you to restrict your calls. Before using this function, you have to enter a password obtained from your service provider.

- (1) On the Home screen, click [**Start** → **Settings** → **Phone**].
- (2) Click [**Call Barring**] to activate this function.

**N.B.**

*1. If you input the wrong restricted password three times in a row, the call barring function will be locked and disabled.*

*2. Call Barring needs to be supported by your network. For more details, please check with your service provider.*

### To use call waiting

This network service informs you when someone is trying to reach you while you are on another call.

- (1) On the Home screen, click [**Start** → **Settings** → **Phone**].
- (2) Click [**Call Waiting**] to activate this function.

## Personalising Your Phone

---

### To use fixed dialling

You can set whether or not to enable the fixed dial function.


- (1) On the Home screen, click [**Start** → **Settings** → **Phone** → **More**].
- (2) Click [**Fixed Dialling**] to activate this function.
- (3) On this screen, press the Right Soft Key **\*\*\* <Menu>** to edit the number or to cancel the operation.

*N.B.*

*This function needs to be supported by your network service provider. For more details, please check with your service provider.*

### To hide your phone number

This network service allows you to hide your phone number from the person you are calling.


- (1) On the Home screen, click [**Start** → **Settings** → **Phone** → **Caller ID**].
- (2) In [**Provide my caller ID to**], press the Navigation Key  left or right to display your phone number to [**Everyone**], [**No one**] or [**Only my contacts**].



## Setting the network

---




### To select the network service

- (1) On the Home screen, click [**Start** → **Settings** → **Phone** → **More** → **Networks**].
- (2) In [**Network selection**], press the Navigation Key  left or right to select [**Automatic**] and your phone will automatically search for local networks, or you can select [**Manual**] and click [**Menu** → **Find a New Network**], the results will be listed on the screen.
- (3) Highlight the network you want to use and click **<Select>** to connect.



### Setting connections

#### To use wireless manager

[Wireless Manager] acts like a central switcher that lets you enable or disable phone features as well as easily manage your data connections.

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Wireless Manager**].
- (2) Simply press the Navigation Key  up, down to switch between [**Bluetooth**] and [**Phone**], then press the center of the Navigation Key  to activate or lock it select [**All**] and press the center of the Navigation Key  to turn on/off both Bluetooth and phone functions.



- ❖ If you have activated the Bluetooth function, the icon  will appear on the screen and the indicator will flash.
- ❖ While switching off the phone function, the signal icon on the Home Screen displays , and other people can not get through your phone.
- ❖ If you are unable to make a call after inputting a phone number, “**The phone is currently off. Would you like to turn on the phone?**” will appear on the screen. Press the Left Soft Key **\*\* <Yes>** to activate the phone function.


## Personalising Your Phone

---


*N.B.*

*Follow the above instructions to switch off your phone in places where it is prohibited to use your phone.*

### To receive incoming beams

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Beam**].
- (2) Press the center of the Navigation Key  to enable [**Receive incoming beams**] function, then your phone can receive data beamed from other devices.

### To set bluetooth

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Bluetooth**].
- (2) Press the center of the Navigation Key  to turn on/off Bluetooth or select to whether to make this device visible to other devices.

For more details about setting Bluetooth, please refer to “Using Bluetooth” on page 126 .

### To set multiple network connection

With wireless connection, the Internet and WAP network, your phone provides you with various network connection manners, including [**Dial-up**], [**GPRS**], [**Proxy**], [**VPN**] and [**USB to PC**].

- (1) On the Home screen, click [**Start** → **Settings** → **Connections**].
- (2) Scroll to select [**Dial-up**], [**GPRS**] or [**Proxy**], or click [**More**] to select [**VPN**] or [**USB to PC**], then press the Left Soft Key **\*\*\* <Menu>** to add, edit or delete the network connection.
- (3) Click **<Done>**.

*N.B.*

*Your phone includes the default network connection settings, so you do not need to modify this setting.*



*In case you modify any setting, you can restore it using the restore factory setting function. For more details, please refer to “Resetting your phone” on page 57.*

### 4. Managing Your Phone



#### Managing files

---

##### To copy a file using ActiveSync

Copying a file results in separate versions of a file on your phone and PC. Because the files are not synchronised, changes made to one file will not affect the other.

- (1) Connect the phone to your PC by using a USB cable.
- (2) In ActiveSync, click [**Explore**], which opens the Mobile Device folder for your phone. In the Mobile Device folder, go to the file that you want to copy your phone or PC.

Do one of the following:

- ❖ To copy the file to your phone, right-click the file and click [**Copy**]. Right-click the desired folder on your phone and click [**Paste**].

- ❖ To copy the file to your PC, right-click the file and click [**Copy**]. Right-click the desired folder on your PC and click [**Paste**].

*N.B.*

*To copy a file from PC to your phone, you should create a synchronization relationship between your PC and the phone. For more details about it, please refer to “To set up ActiveSync” on page 59.*

##### To use file explorer


File Explorer provides many easy-to-use features for file and folder management.

On the Home screen, click [**Start** → **More** → **File Explorer**] to enter the File Explorer screen.

- ❖ **Bluetooth**: Stores the files or folders which sent from the Bluetooth FTP folder of other Bluetooth-enabled devices.
- ❖ **My MIDlets**: Stores some JAVA application programs.

- ❖ **My Music:** Stores all types of ring tone that you have downloaded.
- ❖ **My Pictures:** Stores the captured photos by using [Camera] function of the phone.
- ❖ **My sounds:** Store the default audio files of the phone.
- ❖ **My videos:** Stores video files in this folder.
- ❖ **Notes:** Stores the recorded files with WAV format by using [Voice Notes] function of the phone. If you haven't recorded audio files, the folder will not appear.
- ❖ **UAContents:** It is MMS mail box which is used to store some MMS files.

### To change the display of the file


- (1) On the Home screen, click [**Start** → **More** → **File Explorer**].
  - (2) Scroll to select the desired folder and press the center of the Navigation Key .
  - (3) Click [**Menu** → **View**] to select to view the files with icons or list.
- ### To send a file via messaging or bluetooth
- (1) On the Home screen, click [**Start** → **More** → **File Explorer**].
  - (2) Open a folder and scroll to select the desired file.
  - (3) Click [**Menu** → **Send**] to select to send the file via MMS or Outlook Email. The file will be added to the MMS or Email as an attachment automatically, then enter the relative information of the MMS or Email.
  - (4) Click <**Send**>.

## Managing Your Phone

---

### Folder options

- (1) On the Home screen, click [**Start** → **More** → **File Explorer**] to enter the File Explorer screen.
- (2) Open a folder and select the desired file.
- (3) Press the Right Soft Key \*\*\* <**Menu**> to access the following options. See the following image for more details.

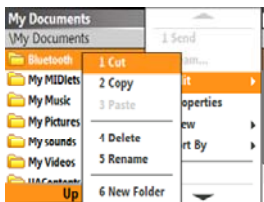

### Using task manager

---

Task Manager allows you to view all the programs currently running on your phone in

the form of a list. From Task Manager, you can switch to activate or terminate any currently running program. It also allows you to view the phone memory status and battery information.

### To start task manager(including refresh)

On the Home screen, click [**Start** → **More** → **More** → **Accessories** → **Task Manager**] to enter the Task Manager screen, shown as the below image:



Click [**Menu** → **Refresh**], then you can refresh the Task Manager screen to reflect a list of currently running programs.

### To stop applications

- (1) On the Home screen, click [**Start → More → More → Accessories → Task Manager**] to enter the File Explorer screen.
- (2) Use the Navigation Key to select the desired application, click [**Menu → Stop**] to stop the selected program. To stop all listed programs, click [**Menu → Stop**]. Click [**Menu → Stop All but Selected**] to stop all the running programs in the list except the one you selected.



### Power Management


---

You can use Power Management to check the battery and configure settings that prolong battery life.

### To check the battery power

- (1) On the Home screen, click [**Start → Settings → More → Power Management**].
- (2) In [**Main battery**], you can check the amount of battery life remaining.

### To optimise the power performance

- (1) On the Home screen, click [**Start → Settings → More → Power Management**].
- (2) Adjust the following:
  - ❖ In [**Backlight time out on battery**], press the Navigation Key  left or right to select the amount of time for the phone to be idle before the backlight turns off.
  - ❖ In [**Backlight time out on AC**], select the amount of time for the phone to be idle before the backlight turns off when using AC power.

## Managing Your Phone

---

❖ In **[Display time out]**, select the time limit for the phone to be idle before the screen turns off.

(3) Click **<Done>**.

### Viewing the phone and system information

---

#### To view memory details

- (1) On the Home screen, click **[Start → Settings → More → More → About]**.
- (2) Scroll down to **[Available Memory]** and **[Total Memory]** to see the total memory and how much memory is available.

#### To find the phone specification

- (1) On the Home screen, click **[Start → More → More → Accessories → System Information]**.

- (2) The System Information screen displays the details about the phone specification, such as processor, speed, memory, display, model name, and so on.

### Protecting your phone

---


There are several levels of security on your phone. You can protect your phone from unauthorised use by requiring a type of password called a PIN (personal identification number) in order to make calls. Your first PIN will be given to you by your wireless service provider. Additionally, you can lock the keypad or the entire phone to prevent unauthorised access.

#### To enable or disable the phone lock

- (1) On the Home screen, click **[Start → Settings → More → Security → Device lock]**.

- (2) Select [**Prompt if device unused for**], then select the amount of time for the phone to be inactive before automatically locking.
- (3) Select the [**Password type**], then enter and confirm your password.
- (4) Click **<Done>**.
- (5) To unlock the phone, click **<Unlock>** and enter the password you have set.

*N.B.*

*Alternatively, press the Power Key  briefly to display the Quick List and then select Device lock to configure the phone lock settings.*

### To enable or disable SIM PIN

- (1) On the Home screen, click [**Start**→**Settings**→**More**→**Security**].
- (2) Click [**Enable SIM PIN**].
- (3) Enter your PIN, and click **<Done>**.

- (4) To disable SIM PIN, click [**Disable SIM PIN**] and enter your PIN.

### To change PIN

Be sure to make a note of your personal identification number (PIN). When the SIM/USIM PIN is enabled, you must provide this PIN to unlock the phone.

- (1) On the Home screen, click [**Start**→**Settings**→**More**→**Security**].
- (2) Click [**Change PIN2**].
- (3) In [**Old PIN**], enter the current PIN.
- (4) Enter and confirm the new PIN, and click **<Done>**.


### To lock or unlock the keypad


Locking the keypad turns off keypad functionality. This is a helpful feature if, for example, the phone is turned on and in your pocket, and you want to prevent accidental key

## Managing Your Phone


---

presses.

- (1) On the Home screen, press and hold the END Key  to lock the phone. Once the keypad is locked, the left soft key label changes to <Unlock>.

- (2) Click <Unlock> and press  to unlock the keypad.

*N.B.*

1. To quickly lock the keypad, press the Power Key  briefly to display the Quick List, and select [Key lock].
2. You can still receive calls and make emergency calls when the keypad is locked.



### Removing programs

---

You can delete the programs you won't use so as to release more memory for the system.

- (1) On the Home screen, click [Start→Settings→More→Remove Programs].

- (2) Scroll to the program to remove.

- (3) Click [Menu→Remove].

*N.B.*

*Programs that come with the phone cannot be removed.*



### Resetting your phone

---

Resetting your phone will remove all the data from its memory which include contacts, tasks, calendar appointments and more, and restore the phone back to the factory default settings.

*N.B.*

*All your data will be deleted. It is recommended that you back up your data first before resetting your phone.*

- (1) On the Home screen, click [Start→More→More→Accessories→Master Clear].



- (2) Follow the on-screen instructions to reset the phone. The phone will restart after it has been reset.

## Synchronising Information

---

### 5. Synchronising Information



#### Connecting your phone to your PC(USB mass storage)

---

You can use E610 phone as a USB flash disk to store information, which is very convenient and helpful for your work and life.

- (1) Insert USB data cable to the USB port of PC, then connect the phone, at this time, ActiveSync software will connect and activate automatically.
- (2) Click [**My Computer**→**Mobile Device**] on PC, so you can have some operations on files (such as new, copy, cut, paste, delete).
- (3) To view the downloaded or copied pictures or ringtone, you can enter [**File Explorer**], select a folder and click [**Menu**→**My Device**], and then you can view the current file, such the downloaded audio

file.

*N.B.*

*It is advisable not to delete the preset system folders of phone on the PC*



#### Using ActiveSync

---

##### About ActiveSync

ActiveSync synchronises information on your phone with information on your PC. ActiveSync can also synchronise over a wireless network with Exchange Server if your company or service provider is running Exchange Server with Exchange ActiveSync.

To access ActiveSync from the Home Screen, click [**Start**→**ActiveSync**].

Specifically, you can use ActiveSync to:

- ❖ Synchronise information such as Outlook E-mail, contacts, calendar or tasks information on your phone with your PC, as

well as music and video files.

- ❖ Synchronise Outlook E-mail, contacts, calendar appointments and tasks on your phone directly with Exchange Server so that you can stay up to date even when your PC is turned off.
- ❖ Copy files between your phone and your PC. Without synchronising.
- ❖ Select which types of information are synchronised and specify how much information is synchronised. For example, you can choose how many weeks of past calendar appointments to synchronise.

### To set up ActiveSync

To install and set up ActiveSync on the computer:

- (1) Install ActiveSync on your PC, as described on the Window Mobile™ Getting Started Disc. After Setup completes, the synchronisation setup wizard starts

automatically when you connect your phone to the PC.

- (2) Follow the instructions on the screen to complete the wizard, in the sync setup wizard, do one or both of the following:
  - ❖ Create a synchronisation relationship between your PC and the phone
  - ❖ Configure the Exchange Server connection to synchronise directly with Exchange server. You need to specify the Exchange Server address, user name, password, and domain name.( Get this information from your administrator)
- (3) Choose the information types to synchronise.
- (4) When you finish the wizard, ActiveSync automatically synchronises your phone. Once synchronisation completes, you can disconnect your phone from your PC.

## Synchronising Information


---

### To start and stop synchronisation

- (1) Connect your phone.
- ❖ To synchronise local information on the PC, such as Outlook information or media files, connect your phone to the PC using Bluetooth or a USB cable.
- ❖ If you are synchronising directly with Exchange Server, you can use the connection to the PC to access the network, or you can synchronise over a cellular without connecting to the PC.
- (2) In ActiveSync, click [**Sync**]
- (3) To end synchronisation before it completes, click [**Stop**].

ActiveSync synchronises a limited amount of information by default to save memory on your phone. You can change the amount of information that is synchronised by performing the following steps.

### To change the synchronised information

- (1) On the Home screen, click [**Start**→**ActiveSync**].
- (2) Click [**Menu**→**Options**]
- (3) Do one of the following:
  - ❖ Select the check box for the items you want to synchronise by pressing the center of the Navigation Key . If you can not select a check box, you might have to clear the check box for the same information type elsewhere in the list
  - ❖ Clear the check box for any items you want to exclude.
  - ❖ To customise synchronisation of a computer, select the computer name and then click [**Menu**→**Settings**].
  - ❖ To customise synchronisation of particular information, select the information type and click [**Settings**].

- ❖ To stop synchronisation with one computer completely, select a computer name and click [**Menu**→**Delete**].

*N.B.*

*Outlook E-mail can be synchronised with only one computer.*

### To synchronise inbox

- (1) As a default, while synchronising Inbox of PC or server, it can only synchronise the e-mails for the latest three days and only the first 500 bytes of each e-mail. If you want to view the whole e-mail, you should download the whole e-mail.
- (2) Your phone has a sync relationship with a PC. In case an e-mail in the phone or the PC is deleted, the same e-mail in the PC or the phone will be deleted while synchronising next time.
- (3) While synchronising mails in the other folders of Outlook besides Inbox, you need

to select the corresponding folders in the phone.

*N.B.*

*Text messages and MMS can't be synchronised.*

### To synchronise schedule

- (1) You can synchronise the Schedule stored on your phone with that of Outlook or Mobile Information Server 2002 and the other advanced versions stored on the PC.
- (2) As a default, only the schedule for the past two weeks and all future schedules can be synchronised.

### To synchronise task


You can synchronise the Microsoft Outlook tasks on PC to your phone.



*N.B.*

*Before synchronising, you need to use the attached disc and install ActiveSync software according to the prompts on the screen.*

## Synchronising Information

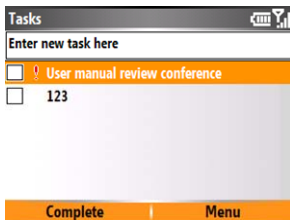- (1) On the Home screen, click [**Start**→**Organizer**→**Tasks**].
- (2) After installation, please activate ActiveSync software on PC and use USB cable to connect your phone with PC. As default, the system will synchronise the tasks on PC to [**Tasks**] of your phone automatically.
- (3) After synchronisation, the following [**Tasks**] screen will appear:



- (4) Press the Navigation Key  up or down to select your desired task and press the center of the Navigation Key  to view the following:



### To synchronise with exchange server

To set up your phone to synchronise directly with exchange server, you will need to get the server name and the server domain name from your service provider or system administrator; you must also know your exchange user name and password.

*N.B.*

*Before changing synchronisation settings on the phone, disconnect it from your PC.*

- (1) On the Home screen, click [**Start**→**ActiveSync**→**Menu**→**Configure Server**]. If you have not yet set up synchronization with Exchange Server, this will say [**Add Server Source**].
- (2) On the Edit Server Settings screen, enter the name of the server running Exchange Server in the [**Server address**] box and click <**Next**>.
- (3) On the User Information screen, enter your user name, password and domain name.
- (4) If you want the phone to save your password so that you will not need to enter it again when connecting, click the [**Save password**] check box. Then click <**Next**>.
- (5) On the Options screen, select the check boxes of the types of information that you

want to synchronise with Exchange Server.

- (6) To customise synchronisation of a particular type of information, select the type of information then click [**Menu**→**Settings**].
- (7) To change the rules for resolving synchronisation conflicts, click [**Menu**→**Advanced**] on the Options screen.
- (8) Click <**Finish**>.

*N.B.*

*You can also use the Sync Setup Wizard to set up the phone to synchronize remotely with Exchange Server. This wizard is started when you connect your phone to your PC after installing ActiveSync on the PC.*

### To stop synchronisation

- (1) Disconnect the device from your phone.

## Synchronising Information

---

- (2) As shown on the next page, select “**Mobile device**” in the “**Files**” menu.
- (3) Select the device that you want to stop synchronization.
- (4) Select “**Delete mobile device**” in “**Files**” menu.



### To install software in the phone

- (1) Create connection between your phone and PC through ActiveSync.
- (2) Operate the installation files on PC.
- (3) Select the installation position in the phone and begin to install.

### To synchronise via bluetooth

With Bluetooth function, you can connect your phone with other mobile devices or PCs and synchronise between them.

- (1) Follow the instructions in ActiveSync Help on the PC for configuring Bluetooth on your PC to support ActiveSync.
- (2) On the Home screen, click [**Start** → **ActiveSync**].
- (3) Click [**Menu** → **Connect via Bluetooth**], and ensure that the phone and the PC are within close range.



- (4) If this is the first time you have connected to this PC via Bluetooth, you must complete the Bluetooth wizard on the phone and set up a Bluetooth partnership with the PC before synchronising.
- (5) Click **<Sync>**.
- (6) When finished, click [**Menu** → **Disconnect Bluetooth**]

*N.B.*

- 1. To preserve battery power, turn off Bluetooth when not in use.*
- 2. To connect and synchronise your phone with a computer via Bluetooth, your computer must have a Bluetooth adapter or dongle.*

### To solve ActiveSync connection problems

If you use a USB data cable to connect your device to a PC, and ActiveSync can't recognize the device or the program stops responding,

you can solve the problems by referring to the following information.

Carry out the following steps one by one until you have solved the problem. For more detailed information (including the detailed instructions about the common PC firewall program), visit the troubleshooting section of the Windows Mobile web page.

- ❖ Check the devices according to the system information, and solve all connection problems.
  - ❖ Make sure both the device and the PC have an activated USB connection.
- (1) In [**File**] menu of ActiveSync on PC, click [**Connection setting**] and then click [**Allow USB connection**].
  - (2) In ActiveSync on the device, click [**ActiveSync**] to enter the ActiveSync screen, and then click [**Menu**→**Connections**→**Synchronize all PCs using this connection**].

## Synchronising Information

---

- ❖ Disconnect the device and re-connect it.
- ❖ Disconnect the device, then restart and reconnect the device.
- ❖ Disconnect the device, then restart the PC and re-connect the device.
- ❖ Do the following:
  - (1) Disconnect the device.
  - (2) Open the following PC firewall ports for all programs:
    - 990: Open entry TCP port
    - 999: Open entry TCP port
    - 5678: Open entry TCP port
    - 5679: Open exit UDP port
    - 5721: Open entry TCP port
    - 26675: Open entry TCP port
  - (3) Reconnect the device.
- ❖ Do the following:

- (1) Disconnect the device.
  - (2) Disable the antivirus program.
  - (3) Reconnect the device
- ❖ Do the following:
    - (1) Disconnect the device.
    - (2) Delete ActiveSync by using “**Add/Delete program**”.
    - (3) Install ActiveSync.
    - (4) Reconnect the device.
  - ❖ Do the following:
    - (1) Disconnect the device.
    - (2) Select [**Control panel**→**Network Connection**] on PC.

*N.B.*

*If [Control panel] sets as sort view, please click [Network and Internet connection] and then click [Network connection].*

- (3) Select local connections established by ActiveSync with right key, and then click **"Property"**. It will display **"Devices based on Windows Mobile"** in **"Use during connection"** box.
- (4) Select all menus in **"The connection uses the following items"**.
- (5) Reconnect the device.
- ❖ Please make sure DHCP client server is operating on PC. As for the details about how to activate or stop Windows services and view its status, please refer to "Windows help and support center".

### 6. Exchanging Messages

The messaging service is a network service which is used to send SMS/MMS between mobile phone users. (Or send to an e-mail address if this is supported by the network). Whether this menu can operate normally depends on your SIM card and the services supplied by the network provider, so please check before using this service.



#### Using text messages

---


With Text Messages, you can use other people's phone numbers to send instant text messages from your phone to their messaging-ready phones – and they can send messages to you. When you receive a new message, it will automatically display on your phone's screen.

#### To view and edit text messages service center

On the Home screen, click [**Start**→**Settings**→**Phone**→**Call Options**→**Text messages service center**]. You can also consult your network service provider about your local text messages service number.



#### To enable request delivery notification

After enabling this function, you will receive a message delivery notification from your network when the message has been successfully sent.


- (1) On the Home screen, click [**Start**→**Messaging**→**Text Message**].
- (2) Click [**Menu**→**Options**], then scroll to select [**Account Settings**].
- (3) In [**Request delivery notification**], press the center of the Navigation Key  to enable or disable this function.

- (4) When finished, click **<Done>**.

### To write and send messages

- (1) On the Home screen, click **[Start → Messaging → Text Message]**.
- (2) Press the Left Soft Key **\*\*\* <New>**, and a new message screen will open.
- (3) In **[To]**, add a recipient's phone number manual or select Contacts list to use a number stored on your phone by pressing the center of the Navigation Key , or clicking **[Menu → Add Recipient]**. The phone also supports the "Group message" function. If you have selected "Send a Text Message" and addressed it to a group, then you can send the message to multiple-recipients.
- (4) Use your keypad to enter your message content. Press  repeatedly to select the desired character input mode. (See "Entering information" on page 28.) During

typing, click **[Menu → My Text]** to insert commonly used phrases in the message, or you can click **[Menu → Cancel Message]** to cancel the current text message.

- (5) After typing a message, click **[Menu → Message Options]**, then press the center of the Navigation Key  to select **[Request message delivery notification]**. A "✓" symbol will appear, and you will receive a message delivery notification from your network when the message has been successfully sent. Or press the Left Soft Key **\*\*\* <Send>** to send the text message directly to the recipient.

### To receive messages(including reply forward)

- (1) From an open message, click **<Reply>**, or click **[Menu → Reply All or Forward]**.

## Exchanging Messages

---

- (2) Enter a message in the message area.
- (3) Click **<Send>**.



### Using MMS messages

---

Creating and sending Multi media Message Service (**MMS**) messages to your friends and family is fun and easy. You can include or capture photos or video clips, include or record audio, add text, then send them along with your MMS message.

#### To configure MMS settings

When you send an MMS message, a text message notification message will first be sent to the recipient, while your MMS message will be temporarily stored on an MMS server of your wireless service provider. Similarly, when others send you an MMS message, the MMS message will be stored on the MMS server, waiting for you to retrieve it. Hence, your phone must be configured with the location of the

MMS server for you to be able to send and receive MMS messages on your phone.



When you purchase your phone, it is already preset with your wireless service provider's MMS server settings. If you accidentally lose the preset settings or if you change to another wireless service provider, follow the steps below to configure MMS settings.

- (1) On the Home screen, click **[Start→Messaging→MMS]**.
- (2) On the MMS main screen, select **[Menu→Options→Account Settings]** to open the Preferences screen.
- (3) Select or clear the provided check boxes according to your needs. You can select to keep track of your MMS messages, retrieve messages immediately, accept or reject messages and request a delivery or read receipt. You can also specify a resolution for images you send and message delivery attempts.

## Exchanging Messages

- (4) On the Preferences screen, click [**Menu** → **MMSC Settings**], then click [**Menu**→**Edit**] to access Multimedia Messaging Service Center (MMSC) settings.
- (5) Check if your phone is preset with MMS server settings.

If there are no preset settings, click [**Menu** → **New**] on the MMSC Settings screen and enter the following information, which you can get from Orange:

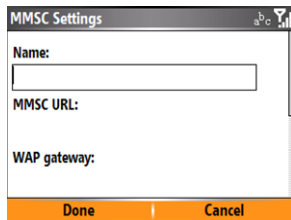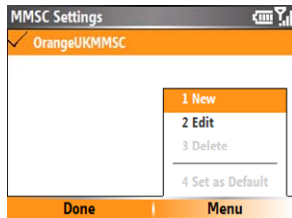

- ❖ **Name:** A descriptive name, such as your wireless service provider name.
- ❖ **MMSC URL:** URL address of the MMS server.
- ❖ **WAP gateway:** Location of the MMS server, which is usually in the form of an IP address.
- ❖ **Port:** HTTP port number used for connecting to the MMS server and for file transfer.
- ❖ **Connect Via.** Select [**The Internet**] from the list.
- ❖ **Max. Sending Size:** Select the maximum

## Exchanging Messages

---

MMS message size allowed by your wireless service provider.

- (6) Press the Left Soft Key **\*\*\* <Done>**.

The MMS server settings will then be added as an entry on the MMS Configuration screen.


*N.B.*

*If you add several MMS service providers to the MMSC Settings you can choose one as your default MMS provider. Select the MMS provider's name in the list, then click [Menu → Set as Default].*

### To write and send MMS messages

You can compose MMS messages in a combination of various slides, where each slide can consist of a photo, audio or video clip, and/or text.


- (1) On the Home screen, click [**Start** → **Messaging** → **MMS** → **New**].


- (2) In [**To**], enter the recipient's phone number or email address directly, or press the center of the Navigation Key  to choose a phone number or an email address from Contacts. You can also click [**Menu** → Recipients → **Add**] to add a new contact entry.
- (3) In [**Subject**], enter a subject for your message.
- (4) Click [**Insert Picture/Video**] to select a photo or video clip from the Select Media screen and click [**Menu** → **Select**] insert it. To navigate to any other folder containing pictures or videos, click [**Menu** → **Change Folder**].
- (5) Or you can capture a new photo or video clip and send it immediately with the message, click [**Menu** → **Capture Picture**] or [**Menu** → **Capture Video**] from the Select Media screen. The newly captured photo or video clip is automatically inserted into your message.



- (6) Enter text and insert audio clips by clicking the respective fields.
- (7) Click **<Send>** to send the message.

The following symbols act as shortcuts to some of the options on the MMS Message screen.

❖ Click  to go to the previous slide.

❖ Click  to go to the next slide.

### ***N.B***

*To send a copy of this message to others, access Cc and Bcc by clicking [Menu → Send Options]. In these fields, enter the recipient's phone number or email address or click [Menu → Recipients → Add] to add from Contacts.*

### **To create an MMS message from a template**

On the blank MMS message screen, click **[Menu → Template → New from Template]** to


compose a message using a predefined template.

### ***N.B.***

*To save a message as a template, create a message or open an existing message, and click [Menu → Template → Save as Template].*


### **To add predefined text to an MMS message**

You can instantly add text to any slide from a list of predefined words or phrases, called **[My Text]**.

On the MMS message screen, scroll to **[Insert text]** and press the center of the Navigation Key , click **[Menu → MyText]** and then click **<Select>** to add a text string from the My Text list.

## Exchanging Messages

---

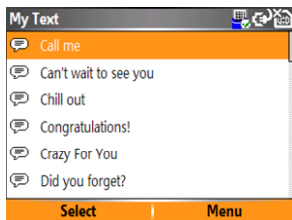

To edit or delete a phrase on the Canned Text list, select a text string and click **[Menu→Edit]** or **[Menu → Delete]**. To create and add a new phrase to the list, click **[Menu →New]**.


### To view and reply to MMS messages

#### To receive an MMS message

On any MMS message folder screen, click **[Menu → Send/Receive]**. By default, messages are automatically downloaded to your phone.

#### To view an MMS message

You can view MMS messages in several ways:

- ❖ Press the center of the Navigation Key  to view and play the message on your phone. Click **<Pause>** or **[Menu → Stop]** to pause the playback of the message.
- ❖ •Click **[Menu →Object View]** to see a list of files included in the message. To open a file, select it and click **<Open>**. To save a file, select it, and click **<Save>**, **[Menu → Save Audio]**, or **[Menu → Save Photo]**.
- ❖ View each slide included in the message by clicking **[Menu → Next]**.

### To reply to an MMS message

Click **[Menu→ Reply →Reply]** to reply to the sender of the message, or click **[Menu → Reply → Reply All]** to reply to all persons listed in the To and CC boxes of the message. Click **[Menu→ Reply → Forward]** to forward the message to someone else.




### Using email

The E610 can receive and send e-mail and can be synchronized with Outlook E-mails on your PC. However, this function needs to be supported by the network, so you must set network and account information before using it. (The phone has been set to the default network, and you don't need to set it).

#### To set up a POP3/IMAP4 email account

You need to set up an email account that you have with an Internet service provider (ISP) or an account that you access using a VPN server connection (typically a work account) before you can send and receive email.

- (1) On the Home screen, click **[Start → Messaging]** and click any item on the Messaging screen.
- (2) Click **[Menu → Options → New Account]**.

- (3) In **[Your e-mail provider]**, press the Navigation Key  left or right to select **[Other (POP3/IMAP)]** and click **<Next>**.
- (4) In **[Your name]**, enter your display name for email messages.
- (5) In **[Email address]**, enter the email address for this account.
- (6) Select **[Attempt to obtain email settings from the Internet]** and click **<Next>**.

Auto Setup attempts to download necessary email server settings so that you do not need to enter them manually. If the account is set up successfully, you will be prompted to send and receive email.

If **[Auto Setup]** is unsuccessful or you have an account you access using a VPN server connection, contact your ISP or network administrator for the following information and enter it manually:

Setting	Description
---------	-------------

## Exchanging Messages

User name	Enter the username assigned to you by your ISP or network administrator. This is often the first part of your email address, which appears before the sign (@).
Password	Choose a strong password. You have the option to save your password so you do not need to enter it each time you connect to your email server.
Domain (if necessary)	Not required for an account with an ISP. May be required for a work account.
Server type	Select POP3 or IMAP4.
Account name	Enter a unique name for the account, such as


	"Work" or "Home". This name cannot be changed later.
Network	Enter the type of network your email server connects to.
Incoming server	Enter the name of your email server (POP3 or IMAP4).
Require SSL connection	Select this to ensure you always receive email for this account using an SSL connection. This enables you to receive personal information more securely. Please note that if you select this and your ISP does not support an SSL

## Exchanging Messages

	connection, you will not be able to connect to receive email.
Outgoing server	Enter the name of your outgoing email server (SMTP).
Outgoing server requires authentication	Select this if your outgoing email server (SMTP) requires authentication. Your username and password from above will be used.
Outgoing server settings	Your outgoing email server may require different authentication settings than your incoming email server.
Use different user name for outgoing	Select this if your outgoing email server requires a different user name and

server	password than the ones you entered before.
--------	--

### To write and send email

- (1) On the Home screen, click [**Start** → **Messaging**].
- (2) Select an email account, then click **<Select>**.
- (3) Click **<New>**.
- (4) Enter the email address of one or more recipients, separating them with a semicolon (;). To access addresses and phone numbers from Contacts, in **To**, press the center of the Navigation Key  and select a recipient from the list.
- (5) Enter a message. In a new message, click [**Menu** → **Insert**] and then click [**Picture**]

## Exchanging Messages

---

or **[Voice Note]**. Select the picture you want to attach, or record a voice note.

- (6) Click **<Send>**.

*N.B.*

*1. If you are working offline, email messages are moved to the Outbox folder and will be sent the next time you connect.*

*2. To set the priority of an email message, click [Menu → Message Options].*

### To receive email(Including download)

On any Email folder screen, click **[Menu → Send/Receive]**. By default, messages are automatically downloaded to your phone.

*N.B.*


*In an open message with an attachment, select the attachment. The attachment is downloaded the next time you synchronise or connect to your email server and send and receive email.*

### To reply or forward an email

- (1) From an open email, click **<Reply>**, or click **[Menu → Reply All or Forward]**.
- (2) Enter a message in the message area.
- (3) Click **<Send>**.

When you reply to all the recipients of an email, your own email address will also be added to the recipient list. You can customise ActiveSync so that your email address will be excluded from the recipient list.

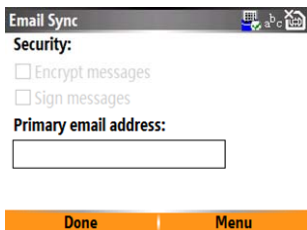

- (1) On the Home screen, click **[Start → ActiveSync]**.
- (2) Click **[Menu → Options]**.
- (3) Select **[Email]**, and click **<Settings>**.
- (4) Click **[Menu → Advanced]**.
- (5) In the **[Primary email address]** text box, enter your email address.



### To individually sign and encrypt a new

- (1) On the Home screen, click [**Start → Messaging**].
- (2) In the message list, select [**Outlook Email**].
- (3) Click <**New**>.
- (4) Click [**Menu → Message Options**].
- (5) In the [**Security**] field, select the [**Encrypt message**] and [**Sign message**] check boxes then click <**Done**>.

### To set digital signature for an email

- (1) On the Home screen, click [**Start → Messaging**].
- (2) Select an email account, and then click <**Select**>.
- (3) Click [**Menu → Options**], and then select [**Signature**].
- (4) In [**Select an account**], press the Navigation Key  left or right to select the desired account, then in [**Use signature with this account**], press the center of the Navigation Key  to enable the digital signature function. In [**Signature**] check box, you can edit the signature content.
- (5) Click <**Done**>.

## Exchanging Messages

---



### Managing folders

---

#### To access messages folders

- (1) On the Home screen, click [**Start** → **Messaging** → **Text Message** /**MMS/Outlook Email**].
- (2) .Click [**Menu**→**Folders**] from the Text Message, MMS or Outlook E-mail screen.

#### Message folders

- ❖ **Deleted items:** Stores the files deleted from the other folders. If you delete the file from [**Deleted Items**], the message is permanently deleted.
- ❖ **Drafts:** Stores messages that will be sent later.
- ❖ **Inbox:** Stores received message.
- ❖ **Outbox:** Stores messages that are sent unsuccessfully.

- ❖ **Sent items:** Stores messages which have been sent successfully.

*N.B.*

*To ensure there is enough memory in the phone, delete the old messages in [Sent Items]. As the remaining memory decreases, you can play a received MMS, but you can't send, save or download the MMS.*



## 7. Pocket MSN

With Pocket MSN, you can do the followings:

- ❖ See which contacts are online or offline.
- ❖ Send and receive MSN message
- ❖ Chat with the contacts by using MSN Messenger.
- ❖ Inform the selected contacts when you come online.
- ❖ Block contacts from seeing you status or sending you messages.
- ❖ You must have a Microsoft Passport account while using MSN Messenger. If you already have a Passport, you must also do the followings:
- ❖ Set a Hotmail account on MSN Messenger
- ❖ Sign in MSN Messenger



---


### Setting an account

Before using MSN Messenger, you must set an account. You must have either a Microsoft Passport account or a Hotmail account to use MSN Messenger. In addition, please connect your phone to the Internet when using MSN Messenger.


- (1) On the Home screen, select [**Start→ More→ More→ Pocket MSN**].
- (2) On the Pocket MSN screen, you need to sign into MSN first;
- (3) Click [**Options→ Messenger**].
- (4) Enter you display name under [**My display name**] box, and click the [**Update presence information for all contacts automatically**] box.

## Pocket MSN

---

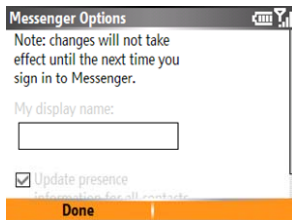

### To sign in MSN Messenger


- (1) On the Home screen, select [Start→More→More→Pocket MSN].
- (2) Press the center of the Navigation Key  or the Left Soft Key \*\*\* to enter the Sign In screen.



- (3) Enter the e-mail address and password. If you want to save your password, click the [Save password] box.
- (4) Press Left Soft Key \*\*\* to sign in.


### To send a MSN message

After signing in MSN, select the contact you want to send a message, and click [Menu →Chats] or [Menu →Send Message].

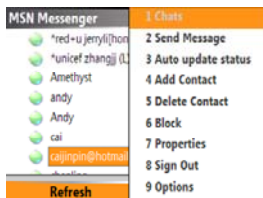

## To end a chat

- (1) First sign in the MSN, select the contact you want to chat, and click [**Menu** → **Chats**].
- (2) On the Chat screen, click [**Menu** → **End Chat**], so you can end the current chat, shown as the below image.

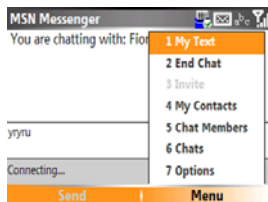

## To invite another contact to join in chat


While chatting with a contact, meanwhile, you can invite another contact to join in the chat.

- (1) First sign in the MSN, select the contact you want to chat, and click [**Menu** → **Chats**].
- (2) On the Chat screen, click [**Menu** → **Invite**], after selecting your desired contact and click [**Select**], so the contact can be joined in the chat.
- (3) While chatting with many people, click [**Menu** → **Chats**], then you can select to

chat with a contact alone or chat with many people.


### To block or unblock a contact

To block a contact from seeing your status and sending messages to you, do the followings:

- (1) First sign in the MSN. For more information about this, please refer to “To sign in MSN Messenger” on page 82.
- (2) Select the contact by pressing the Navigation Key  up or down, and click [**Menu** → **Block**].
- (3) To unblock a contact, you can repeat the above operation and click [**Menu** → **Unblock**].

### To delete a contact

- (1) First sign in the MSN. For more information about this, please refer to “To sign in MSN Messenger” on page 82.

Select the contact by pressing the Navigation Key  up or down, and click [**Menu** → **Delete Contact**].

### To change your own Messenger status

Select your own name at the top of the screen. Your current status is indicated by a bullet point in the displayed list. You can change your status by selecting another status description.

*N.B*

*Only after signing in MSN can you change your own status.*

### To change your display name

- (1) First sign in the MSN. For more information about this, please refer to “To sign in MSN Messenger” on page 82.
- (2) Select your own name from contacts list, and click [**Menu** → **Options**], then you can

enter the name you want to display to others in MSN Messenger.

### To sign out

- (1) First sign in the MSN. For more information about this, please refer to “To sign in MSN Messenger” on page 82.
- (2) On the Contacts list screen, click [**Menu**→**Sign out**], then the system will prompts you “**whether to sign out?**” if you click **<OK>**, then you can sign out the MSN Messenger.




### Hotmail

With this function, you can create E-mails or view your Hotmail Inbox.

As for the details about how to create and send an E-mail, please refer to “Using email” on page 75.

For the received E-mails in Hotmail,

click **<Menu>** and you can have the corresponding operations. The detail shows as the below figure:

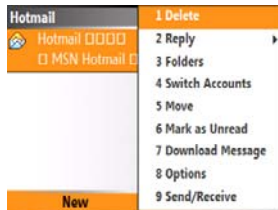

### MSN Mobile homepage

By select this option; the system will speed connect to MSN Mobile Homepage.

### 8. Using Contacts

**[Contacts]** is your address book and information storage for the people and businesses you communicate with. You can store phone numbers, email addresses, home addresses and any other information that relates to a contact, such as a birthday or an anniversary date. You can also add a picture or assign a ringtone to a contact.

To enter Contacts from the Home Screen, press the Right Soft Key **\*\*\* <Contacts>**, or click **[Start→Address Book→Contacts]**.

All contacts are saved in SIM card or the phone.

- ❖ **SIM card contacts:** Each entry includes a name and a phone number. The memory and the content of the SIM card differ according to the SIM card type.
- ❖ **Phone contacts:** You can not only store the contact name, many different types of phone

number, e-mail address, family address etc, but also can store a great deal of the contact's personal information, such as birthday and anniversary.

*N.B.*

*Contacts stored on your SIM card can also be stored on the phone. Contacts stored on the phone will be kept in the original phone. To move them to another phone you will need to copy them to the SIM card.*



---

### Adding a new contact

#### To add a new contact on your phone

- (1) On the Home screen, click **[Start → Address Book→Contacts → New]**.
- (2) Enter information for the new contact.
- (3) Click **<Done>**.

### *N.B.*

*1. If someone who isn't in your list of contacts calls you or sends you a message, you can quickly create a contact from Call History or from the message by clicking [Menu → Save to Contacts].*

*2. In the list of contact information, you'll see where you can add a picture or assign a ringtone to a contact.*

### To add a new contact on your SIM card

- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].
- (2) Click [**Menu** → **New SIM Contact**].
- (3) Enter information for the new contact then click <**Done**>.



### Searching for a contact


---

To find a contact in the Contacts List:

- ❖ Press the Navigation Key  up or down to

search for your desired contact.

- ❖ Begin entering a name or phone number of the contact until the contact is displayed.

When you press a key, such as  , you will find names that begin with D, and the phone numbers that start with 4. The next key you press continues to narrow the search. For example, to find "David", you would

press  ,  ,  ,  , and then 

### *N.B.*

*While pressing the numeric keys to find a contact, the system can only find the contact with the same phone number that you input.*



### Viewing and editing a contact

---

- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].

## Using Contacts

---

- (2) Click the contact whose information you want to view.
- (3) To edit the information, click [**Menu** → **Edit**].
- (4) When finished making changes, click **<Done>**.

### To assign a ringtone to a contact

To easily identify who is calling you, you can assign a custom ringtone to each contact.

- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].
- (2) Click the contact you want to assign a ringtone to.
- (3) Click [**Menu** → **Edit**].
- (4) Click [**Custom ring tone**] and select the ringtone you want.
- (5) Click **<Done>**.

### To assign a picture to a contact

- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].
- (2) Click the contact you want to assign a picture to.
- (3) Click [**Menu** → **Edit**].
- (4) Click [**Picture**] and select the picture you want to add.
- (5) Click **<Done>**.

*N.B.*

*You can only assign a ringtone and a picture to a contact stored on the phone.*



### **Sending a text message, MMS to a contact**

---

#### **To send a text message to a contact**

- (1) On the Home screen, click [Start → **Address Book** → **Contacts**].
- (2) Click the contact, and click [**Menu** → **Send Text Message**].
- (3) Compose your message, and click **<Send>**.

#### **To send an MMS to a contact**


- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].
- (2) Click the contact, and click [**Menu** → **Send MMS by mobile**].
- (3) Enter a subject, then compose your message, and click **<Send>**.

*N.B.*


*You can only send an MMS to a contact stored in the SIM card.*

### **Making a call to the selected contact**

---

- (1) On the Home screen, click [Start → **Address Book** → **Contacts**].
- (2) Click the contact to call.
- (3) Click **<Call>** or press the SEND Key . The contact's default phone number is dialled.

*N.B.*

*To call a phone number other than the default, click the contact, scroll to the number you want to dial, and press .*


## Using Contacts

---

### Sending the contact's information

---

#### To send the contact's information via text message

- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].
- (2) Click the contact, and click [**Menu** → **Send Contact** → **Text Message**].
- (3) Press the center of the Navigation Key  to select the contact information to send, then click <**Done**>.
- (4) Compose the text message and click <**Send**>.

#### To send the contact's information via Bluetooth

- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].

- (2) Click the contact, and click [**Menu** → **Send Contact** → **Beam**].
- (3) Press the Left Soft Key **\*\*\*** <**Beam**> and the phone will search for Bluetooth-enable devices automatically and send the contact's information.

#### To send the contact's information via MMS

You can send a contact card to another phone over MMS.

- (1) On the Home screen, click [**Start** → **Address Book** → **Contacts**].
- (2) Select a contact, then click [**Menu** → **Send as vCard**] or click [**Menu** → **Send Contact** → **Send as Vcard**].
- (3) Enter the recipient in [**To**] of the MMS message, then click <**Send**>.



### Managing the contacts

---

#### To delete a contact

- (1) On the Home screen, click **[Start →Address Book→Contacts]**.
- (2) Select a contact, then click **[Menu →Delete Contact]**

*N.B.*

*To delete a contact's phone number, click the contact and scroll to the number you want to delete, then click [Menu→Delete].*

#### To copy contacts between SIM card and the phone

- (1) On the Home screen, click **[Start →Address Book→Contacts]**.
- (2) Click a contact and click **[Menu→Save to Contacts/Save to SIM]**.

- (3) Enter the contact's information and click **<Done>**.

#### To filter the contact list

Contacts that have categories assigned are displayed in the list when you filter by category.

- (1) On the Home screen, click **[Start →Address Book→Contacts]**.
- (2) Click **[Menu→Filter]**.
- (3) Click a category to filter

### 9. Connecting to the Internet

Your phone's powerful networking capabilities allow you to access the Internet or your corporate network at work through wireless and conventional connections. Specifically, you can configure your phone to establish a connection via Dial-up, GPRS, Bluetooth, Virtual Private Network (VPN), or Proxy.



#### Setting up a connection

---

##### To set up a GPRS connection

GPRS is a non-voice value-added service that allows information to be sent and received across a mobile telephone network. You can use GPRS to connect to the Internet or to send and receive MMS on your phone. When you use GPRS, you will be billed per KB (Kilobyte) when sending or receiving information.

*N.B.*

*Check with Orange about charges for its GPRS service.*

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **GPRS**].
- (2) Click [**Menu** → **Add**].
- (3) In [**Description**], enter a name for the connection.
- (4) In [**Connects to**], select [**The Internet**].
- (5) Enter the name of the GPRS [**Access point**] of your wireless service provider.
- (6) Enter the appropriate information in the remaining fields, if required by your wireless service provider.
- (7) Click <**Done**>. To start browsing the Internet, click [**Start** → **Internet Explorer**].

### To set up a Dial-up connection

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Dial-up**].
- (2) Click [**Menu** → **Add**].
- (3) In [**Description**], enter a name for the connection.
- (4) In [**Connects to**], select [**Work**].
- (5) Enter the appropriate information in the remaining fields.
- (6) Click <**Done**>.

#### ***N.B.***

*You can also add and set up the following connections:*

- 1. VPN: A VPN connection is used to access your corporate network by using an existing Internet connection.*
- 2. Proxy: A Proxy connection is used to access the Internet using an existing connection to your corporate or wap network.*



### Using advanced options

---

From the Connections screen, you can access advanced options to specify the service provider, the number of redial attempts, the amount of idle time to wait before disconnecting, and so on.

- (1) On the Home screen, click [**Start** → **Settings** → **Connections**].
- (2) Click [**Menu** → **Advanced**].
- (3) Select a network service provider for each connection type. You can choose [**Automatic**] to allow the phone to set a service provider for each connection by default.
- (4) Click [**Menu** → **Options**].
- (5) Choose the appropriate information in the remaining fields.
- (6) Click <**Done**>.

## Connecting to the Internet

---



### Adding a URL exception

---

Some URLs for Web pages on your company intranet may use periods, for example: intranet.companyname.com. To view these pages in Internet Explorer Mobile, you must create a URL exception.

- (1) On the Home screen, click **[Start → Settings → Connections]**.
- (2) Click **[Menu → Advanced]**.
- (3) Click **[Menu → Work URL Exceptions]**.
- (4) Click **[Menu → Add]**.
- (5) In **[URL Pattern]**, enter the URL name. To add multiple URLs, use a semicolon (;).
- (6) Click **<Done>**.

*N.B.*

*You do not need to create URL exceptions for Internet URLs.*



### Using Internet Explorer

---

Internet Explorer Mobile is a full-featured Internet browser, optimized for use on your phone.

The E610 allows you to access the Internet or applications through Internet Explorer. To connect to Internet Explorer:

- ❖ Ensure that your SIM card supports the network function. For additional details, check with your network service operator.
- ❖ Contact your network service provider for opening and ordering data service or GPRS service.

#### To browse a Web page

- (1) On the Home screen, click **[Start → Internet Explorer]**.
- (2) In Internet Explorer, click **[Menu → Address Bar]**.

- (3) Enter the address, and click **<Go>**.

### To set the display of Web page

- (1) While on a Web page, click [**Menu** → **View**].

- (2) Select one of the following:

❖ **Text Size:** Select the text size on Web pages.

❖ **One Column.** Arranges the content into one column that is as wide as the screen. This means that you will rarely have to scroll horizontally.

❖ **Default:** Maintains a layout similar to what you see on a desktop computer, but makes items smaller and arranges the content so that you can see most of it without having to scroll horizontally.

❖ **Desktop:** Keeps the same layout and size as on a desktop computer, which will require both horizontal and vertical scrolling.

❖ **Full screen:** Select to view a Web page in


full-screen mode.

❖ **Show Picture:** Select to show or hide pictures on Web pages.

### To send a link via email


- (1) Go to the desired Web page.
- (2) Click [**Menu** → **Tools** → **Send Link via Email**].
- (3) Select [**Text Messages**] or [**Outlook Email**].
- (4) A new message is created with the page address inserted in the message body.
- (5) Enter the other information and click **<Send>**.

### To use Favourite

[**Favourite**] stores your most commonly visited websites. You can select from five default network addresses in [**Favorites**], or you can also press the Navigation Key  down to

## Connecting to the Internet

---

select [**More Favorites**], and then press the center of the Navigation Key  to visit more Web Pages.

### To add a Web page to the Favourites list

- (1) On the Home screen, click [**Start** → **Internet Explorer**].
- (2) To go to the page you want to add, click [**Menu** → **Address Bar**], enter the address, and click <**Go**>.
- (3) Click [**Menu** → **Add to Favourites**].
- (4) Confirm or change the name and Web page address.
- (5) In [**Folder**], select a folder for the Favourite.
- (6) Click <**Add**>.

### *N.B.*

*A quick way to add Favourites to your phone is to synchronise with your PC using ActiveSync. For more information, see ActiveSync Help on your*

### *PC.*

### To view a Favourite

- (1) On the Home screen, click [**Start** → **Internet Explorer**].
- (2) While on a Web page, click <**Favourites**>.
- (3) Select a Favourite, and click <**Go**>.

### To move a Favourite to a folder

- (1) On the Home screen, click [**Start** → **Internet Explorer**].
- (2) Click <**Favourites**>.
- (3) Select the Favourite to move.
- (4) Click [**Menu** → **Edit**].
- (5) In [**Folder**], scroll to the folder to which you want to move the Favourite.
- (6) Click <**Done**>.



### To clear temporary files, cookies or history

- (1) While on a Web page, click [**Menu** → **Tools** → **Options**].
- (2) Click [**Memory**].
- (3) Select the type of memory to clear.
- (4) Click <**Clear**>, then click <**Yes**>, and then click <**Done**>.



### Using Internet sharing

---

When you connect your phone to a PC or laptop computer, Internet Sharing allows you to use your phone as an external modem for the computer.

### To set up the phone as a modem

- (1) Use the USB data line to connect your phone with your PC. The PC will automatically detect that your phone has

been connected, and you can install the USB RNDIS drive on the Getting Started CD.

- (2) While connecting the network line, select [**Network Neighborhood**] on PC then click [**Properties**→**Local Connection**→**Forbidden**] with the Right Soft Key \*\*\* to disconnect the current network.
- (3) After finishing installation, confirm that the RNDIS network card has been added to the network adapter in the Device manager of your PC. If it has, then the drive has been installed successfully.
- (4) At this time, the phone can be used as an external modem for PC, and you can access the Internet.

*N.B.*


*Please make sure you have selected [Tool→Internet Options→Connection] on your PC. Click “Never dial-up to connect,” then select [Local Network Setting]. When the screen appears on your*


## Connecting to the Internet

---

*PC, select [Cancel Proxy Server].*

### To connect to the Internet

- (1) On the Home screen, click [**Start** → **More** → **More** → **Accessories** → **Internet Sharing**].
- (2) Select the PC connection manner – **USB** connection or [**Bluetooth PAN**] connection, then press the center of the Navigation Key .
- (3) Select network connection type. The phone defaults to [**Orange Internet**], or you can set it by referring to “To set multiple network connection” on page 49. To modify the network connection type, Click [**Menu** → **Connection Settings**]. See the image below.

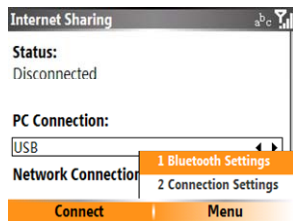

- (4) Click <**Connect**>. If you selected [USB], the PC will automatically check the USB cable connection until the screen displays “Connected” and recognises your phone as a modem. You are now ready to access the Internet on your PC using your phone.

*N.B.*

1. *In order to use the phone as a modem, your SIM card must support this function. For more detailed information, please contact with your service provider.*
2. *If you select [USB] as the PC connection*

*manner, you must install Microsoft ActiveSync version 4.2 on your PC. If you select [Bluetooth PAN] as the PC connection manner, you must first activate and finalize the personal local network setting of Bluetooth on the PC. For more detailed information, please refer to Windows help and support software.*

### **To deactivate Internet sharing**

On the Internet sharing screen, click **<Disconnect>**.

**N.B.**

*Before using ActiveSync, confirm that Internet sharing is deactivated.*

# 10. Using Tools




## Using task

---

Use Tasks to keep track of things you need to do. A task can occur once or repeatedly (recurring). You can set reminders for your tasks and you can organise them using categories. Your tasks are displayed in a task list. Overdue tasks are displayed in red.

### To create a task on the phone

- (1) On the Home screen, click [**Start** → **Organiser** → **Tasks**].
- (2) In the [**Enter new task here**] box, enter the task name and press the center of the Navigation Key .

*N.B.*

*1. You can synchronise information on your phone with your PC to keep your task list up to*

*date in both locations.*

*2. If you create a new task with a reminder on your PC and then synchronise tasks with your phone, the reminder will play at the time that was set on your PC.*

### To beam a task

- (1) On the Home screen, click [**Start** → **Organiser** → **Tasks**].
- (2) Select the task, and click [**Menu** → **Beam Task**].

### To delete a task

- (1) On the Home screen, click [**Start** → **Organiser** → **Tasks**].
- (2) Select the task, and click [**Menu** → **Delete Task**].

### To mark a task as completed

- (1) On the Home screen, click [**Start** → **Organiser** → **Tasks**].
- (2) Select the task, and click <**Complete**>.

### To sort and filtering the task list

- (1) On the Home screen, click [**Start** → **Organiser** → **Tasks**].
- (2) In the task list, do one of the following:
  - ❖ To sort the list, click [**Menu** → **Sort by**], and click a sort option.
  - ❖ To filter the list by category, click [**Menu** → **Filter**], and click the category you want displayed.

#### *N.B.*



- 1. Categories appear only in tasks that are synchronised with your PC.*
- 2. To filter your tasks further, click [Active Tasks] or [Completed Tasks].*



 
### Using calculator

The calculator function can perform standard mathematical operations such as addition, subtraction, multiplication, and division.

#### Using methods

- (1) On the Home Screen, click [**Start** →, **More** → **Calculator**].
- (2) After entering Calculator screen, enter

numbers and press  repeatedly or press the Navigation Key  up, down, left or right to select your desired operation symbols (+, -, /, X).

- (3) Press  to enter a decimal and press the center of the Navigation Key  to get the answer. Press the Back/Clear  to clear last digit entered, and press

## Using Tools

---

the Left Soft Key \*\*\* <Clear> to clear the display.



### Using calendar

---

Use Calendar to schedule appointments, including meetings and other events. Your appointments for the day can be displayed on the Home screen. If you use Outlook on your PC, you can synchronise appointments between your phone and PC. You can also set Calendar to remind you of appointments with a sound or flashing light, for example.

#### To view your schedule

You can view your schedule in three different views: Month, Week and Agenda.

(1) On the Home screen, click [**Start**→**Organiser**→**Calendar**].

(2) Do one of the following:

❖ Click [**Menu**→**Month View**].

❖ Click [**Menu**→**Week View**].

❖ Click [**Menu**→**Go to Today**], or from Week or Month view, click [**Menu**→**Agenda View**].

#### To create a new appointment

- (1) On the Home screen, click [**Start**→**Organiser**→**Calendar**].
- (2) Click [**Menu**→**New Appointment**].
- (3) Enter information about the appointment.
- (4) To schedule an all-day event, in [**End time**], select [**All day event**].
- (5) Click <**Done**>.

*N.B.*

*All-day events do not occupy blocks of time in Calendar; instead, they appear in banners at the top of the calendar.*

### To send a calendar appointment

You can send a calendar appointment to another phone over MMS.

- (1) On the Home screen, click [**Start**→**Organiser**→**Calendar**].
- (2) Select an appointment, then click [**Menu**→**Send as vCalendar**].
- (3) Enter the recipient in the [**To**] line of the MMS message, then click <**Send**>.



### Using voice notes

---


Use Voice Notes to create short voice recordings. Voice notes are included in the All Notes list and are named consecutively (Recording1, Recording2, and so on).

### To record voice notes

- (1) On the Home screen, click [**Start**→**Organiser**→**Voice Notes**].

- (2) Hold the phone's microphone near your mouth.
- (3) Click <**Record**> and say your voice note.
- (4) Click <**Stop**> to stop recording a voice note.

### To play voice notes

- (1) On the Home screen, click [**Start**→**Organiser**→**Voice Notes**].
- (2) Select the voice note to play, and press the center of the Navigation Key  or click [**Menu**→**Play**].

*N.B.*

*To stop listening to the voice note, click <Stop> while the voice note is playing.*

### To delete a voice note

- (1) On the Home screen, click [**Start**→**Organiser**→**Voice Notes**].

## Using Tools

---

- (2) Select the voice note to delete.
- (3) Click [**Menu** → **Delete**].
- (4) Click <**Yes**>.

*N.B.*

*If you delete a voice note that has a default name, such as [Recording1], this name becomes available for a new voice note.*

### To set a voice note as a ringtone

- (1) On the Home screen, click [**Start**→**Organiser** →**Voice Notes**].
- (2) Select the voice note, and click [**Menu** → **Set As Ringtone**].



## Using Multimedia

---

# 11. Using Multimedia



## Using Windows media player

---


You can use built-in Windows Media Player to play digital audio and video files that are stored on your phone or MicroSD card.

The player can play audio files with the following formats: MP3, MID, WAV and WMA.


The player can also play video files in ASF and WMV formats.

To enter Windows Media from the Home Screen, select [**Start**→**More**→**Windows Media**].

The Library screen defaults as Windows Media screen; you can select the files that you want to play from different types of files.

On Library screen, press the Back/Clear Key  to enter playback screen, the details are in the figure on the next page:








On the Windows media screen, press the Left Soft Key **\*\*\* <Now Playing>** to select your desired file in playback list, and then press the center of the Navigation Key  to play the file.

## Controls of Windows Media Player

By default, these hardware buttons are assigned to Windows Media.

Buttons	Allows you to
Press the Navigation	Skip to the beginning of the

Key  left	currently playing file Quickly press the key twice to skip to the previous file Hold the key, it will rewind a file
Press the Navigation Key  right	Skip to the beginning of the next file. Press and hold to fast-forward a file.
Press the center of the Navigation Key 	Play or pause
Press the Navigation Key  up or down	Increase or decrease the volume
	Switch to silent mode

### The screens and options of Windows Media Player

Windows Media Player has three primary screens:

- ❖ **Playback screen:** The default screen that displays the playback controls (such as Play, Pause, Next, Previous and Volume) and the video window. You can change the appearance of this screen by choosing a different skin.
- ❖ **Now Playing screen:** The screen that displays the Now Playing playlist. This special playlist indicates the current file being played and files that are queued up to play next.
- ❖ **Library screen:** The screen that lets you quickly find your audio files, video files and playlists. It contains categories such as **[My Music]**, **[My Videos]**, **[My TV]** and **[My Playlists]**.

## Using Multimedia

At the bottom of each screen is a Menu. The commands on this menu vary, depending upon which screen you are viewing.

### Playback screen menu

When you are viewing the Playback screen, these options appear on the <Menu>.

Options	Allows you to
Library	Display the Library screen so you can select a file to play
Play/Pause	Start or pause playback
Stop	Stop playback
Shuffle/Repeat	Play the items in the Now Playing play list in random order or repeatedly.
Full screen	Play video file or network video media files with full

	screen (this function isn't available for audio files).
Options	Adjust various Windows Media Player Mobile options, including network, skin and hardware button options
Properties	Display detailed information about the currently playing file.
About	Display information about Windows Media Player, such as the version number.

### Now playing screen menu

When you are viewing the Now Playing screen, these options appear on the [Menu].

Options	Allows you to
Library	Display the Library screen so

	you can select a file to play
Move Up	Move the selected item up in the play list order
Move Down	Move the selected item down in the play list order
Delete from Play list	Remove the selected item from the play list but the file is still stored in Library.
Shuffle/ Repeat	Play the items in the Now Playing play list in a random order or repeatedly.
Save Play list	Save the current files in play list
Clear Now playing	Remove all items from the Now Playing play list.
Error Details	View error information about the selected item

Properties	View information about the selected file
------------	--

### Library screen menu

When you are viewing the Library screen, these options appear on the **[Menu]**:

Options	Allows you to
Queue Up	Add the selected item to the end of the current (Now Playing) playlist.
Delete from Library	Delete the selected item from the library.
Now Playing	Display the Now Playing playlist.
Library	Switch between libraries, such as between <b>[My Device]</b> and <b>[Storage Card]</b> .


## Using Multimedia

---


Update Library	Add new items to the library by searching your phone or storage card.
Open File	Find and play files that are stored on your phone or storage card but are not in the library.
Open URL	Play a file on a network, such as the Internet.
Properties	View information about the selected file.
Player	Enter the playback screen

### To add files to play list

- (1) On the Home screen, click **[Start→More→Windows Media]**.

- (2) If you are not on the Playback screen, press the Back/Clear Key  to display the Playback screen.
- (3) Press the Left Soft Key **\*\*\* <Now Playing>** and select the desired file in play list.
- (4) Click **[Menu→Save Playlist]** to save the current file to play list.

### To remove a file from play list

- (1) On the Home screen, click **[Start→More→Windows Media]**.
- (2) If you are not on the Playback screen, press the Back/Clear Key  to display the Playback screen.
- (3) Press the Left Soft Key **\*\*\* <Now Playing>** and select the desired file in play list.
- (4) Click **[Menu→Delete from Playlist]** to delete the current file from play list.

### To play music and videos on your phone

Use the library to find and play songs, videos and playlists that are stored on your phone or removable storage card.

- (1) On the Home screen, click **[Start→More→Windows Media]**.
- (2) If you are not on the Library screen, click **[Menu →Library]**, and then select the library that you want to use (for example, **Storage Card**).
- (3) In most cases, Windows Media Player Mobile automatically updates the library. However, you can manually update the library to ensure that it contains new files that you recently copied to your phone or storage card. Click **[Menu→Update Library]** to manually update the library list.
- (4) Select a category (for example, **[My Music]** or **[My Playlists]**), select the item

that you want to play (such as a song, album or artist name), and then click **<Play>**.

*N.B.*

*To play a file that is stored on your phone but is not in a library, on the Library screen, click **[Menu→ Open File]**. Select the item that you want to play (such as a file or a folder), and click **<Play>**.*

### To play music and videos on a network

Use the **[Open URL]** command to play a song or video that is stored on the Internet or on a network server.

- (1) On the Home screen, click **[Start→More→Windows Media]**.
- (2) If you are not on the Library screen, click **[Menu → Library]**.
- (3) Click **[Menu → Open URL]**.

## Using Multimedia

---


- (4) Do one of the following:
  - ❖ In **[URL]**, enter a network address.
  - ❖ In **[History]**, select a URL that you have previously used.


*N.B.*

*To play media on a network, your phone must be connected to a network*

### To change Player appearance

You can change the appearance of the Playback screen by choosing a new skin.

- (1) On the Home screen, click **[Start→More→Windows Media]**.
- (2) If you are not on the Playback screen, press the Back/Clear Key  to display the Playback screen.
- (3) Click **[Menu → Options → Skins]**.

- (4) To select a skin, press the Navigation Key  left or right until you find the skin that you want to use.
- (5) Click **<Done>**.



### Using video player



---

**[Video Player]** has created a content-rich service experience that is as close as possible to the existing TV. By using packet video solution, you can choose to play a locally stored clip on your device, or play media content from a remote server and enjoy various streaming services provided by Orange.

### To play a video clip

- (1) On the Home screen, click **[Start→More→Video Player]**.
- (2) Select a video clip and click **<Play>** or click **[Menu→Play]** to play your desired video clip, shows as the below figure:



- (3) During playback, it is possible to pause or stop the clip by pressing the Left Soft Key ... or the Right Soft Key... In addition, you can press the Navigation Key  up or down to increase or reduce volume, while holding down press the Navigation Key  left or right to rewind or fast forward the clip. When the video finishes, click <Back> to return the Video player screen.

**N.B.**

*1. When a video is played, a counter displayed the playing time and a progression bar indicates the*

*percentage already played.*

*2.Or when you are in streaming session, and an incoming call occurs, you have the choice to accept the call by clicking <Answer> (and then stop the streaming session) or reject the call by clicking <Ignore>.*

*3. The player can also play video clips in the formats as 3GP and MP4.*

### To rename a video clip

- (1) On the Home screen, click [Start→More→Video Player].
- (2) Select a video clip and click [Menu→File→Rename].
- (3) In [File Name], enter the name of the video clip.
- (4) Click<Rename>.

### To delete a video clip

- (1) On the Home screen, click [Start→



## Using Multimedia

---

**More→Video Player].**

- (2) Select a video clip and click **[Menu→File→Delete]**.

- (3) Click **<Yes >**.




### To move a video clip between the phone and storage card

- (1) On the Home screen, click **[Start→More→Video Player]**.
- (2) Select a video clip and click **[Menu→File→Move to storage card/Move to phone memory]** (if storage card is present).then the video clip will be moved to the storage card or the phone memory.

### To play a video clip in full screen

If your player supports full screen capability, pressing any number key during playback will scale the video clip to fill the entire display, which shows as the below figure:





During playback, you can hold down press the Navigation Key  up or down to rewind or fast forward the clip while pressing the Navigation Key  left or right to increase or reduce the volume. A smart repositioning feature is built into the player, so that the longer you hold down press the Navigation Key  up or down, the quicker the fast forward or rewind will become.

## Using camera and video recorder

Taking photos and shooting video clips with audio are easy with your phone's built-in camera.

### To enter the Camera and Video Recorder preview

- (1) On the Home screen, click **[Start→Camera]** or press the Camera Key  to enter the Camera Preview screen.
- (2) Click **[Menu→Video]** to enter the Video Recorder Preview screen.
- (3) To exit the Camera or Video Recorder, press the END Key .

### Camera and Video settings

While capturing a photo, click **<Menu>** to access the following options:

Options	Description
Video	Select to switch to the video mode.
Mode	Indicates the current capture mode, and you can set it as <b>[Normal]</b> , <b>[Burst]</b> or <b>[Timer]</b> .
Brightness	Select the desired brightness for the photo.
Resolution	Select a picture's file size ( <b>QVGA-320x240</b> , <b>VGA-640x480</b> , <b>SXGA-1280x960</b> , or <b>UXGA-1600x1200</b> ).
Zoom	Zoom in on an object when you take a picture. You can adjust the zoom from 1x to 8x.
White	Set the capture

## Using Multimedia


Balance	environment as [Automatic], [Sunny], [Cloudy], [Office], [Home] or [Night].
Flash	Select to turn on or turn off the flash light while capturing
Full screen	Select to take photos in full screen.
Options	Enter the Options Menu screen, and set the parameters for the camera.


While capturing video clip, click <Menu> to access the following options:

Options	Description
Still	Select to switch to the capture mode.



Brightness	Select the desired brightness for the photo.
Quality	Select the picture quality setting
White Balance	Find and play files that are stored on your phone or storage card but are not in the library.
Full screen	View information about the selected file.
Options	Enter the Options Menu screen, and set the parameters for the camera.

### To change the storage location of photos and videos



- (1) On the Home screen, click [Start→Camera] or press the Camera Key  to enter the Camera Preview screen.

- (2) Click [**Menu**→**Options**→**Camera**].
- (3) In [**Save files to**], press the Navigation Key  up or down to set the desired storage location as [**Main memory**] or [**Storage Card**] (if inserted).
- (4) Click <**Done**>.


### To include audio when recording video files

- (1) On the Home screen, click [**Start**→**Camera**] or press the Camera Key  to enter the Camera Preview screen.
- (2) Click [**Menu**→**Options**→**Video**].
- (3) In [**Include audio when recording video files**], press the center of the Navigation Key  to activate this function.
- (4) Click <**Done**>.

### To include audio when recording video files



- (1) On the Home screen, click [**Start**→**Camera**] or press the Camera Key  to enter the Camera Preview screen.
- (2) Click [**Menu**→**Options**→**Video**].
- (3) In [**Time limit for videos**], press the Navigation Key  left or right to set the time limit as [**No limit**], [**15 seconds**] or [**30 seconds**].
- (4) Click <**Done**>.

### To take pictures and video clips

- (1) On the Home screen, click [**Start**→**Camera**] or press the Camera Key  to enter the Camera Preview screen.

## Using Multimedia

---

- (2) On the Capture Preview screen, click **[Menu→Video]** to switch to the video capture code.
- (3) Press the center of the Navigation Key  or the Camera Key  to capture a photo or video clip. Press the Left Soft Key **\*\*\* <Stop>** to stop recording.

### To send the captured photo or video clips

- (1) First, take a picture or video clip, for more details, please refer to “To take pictures and video clips”.
- (2) Click **[Menu → Send]**.
- (3) On the Messaging screen, select **[MMS]** or **[Outlook E-mail]** then click **<Select>**.
- (4) A new message is created with the item attached.

- (5) Enter the recipient name and subject, and click **<Send>**. The message will be sent the next time you synchronise your phone.

### To beam the captured photo or video clips

- (1) First, take a picture or video clip, for more details; please refer to “To take pictures and video clips”.
- (2) Click **[Menu → Beam]**.
- (3) Select the device to which you want to send the picture.
- (4) Click **<Beam>**.

### To set the captured photo as Home Screen

- (1) First, take a picture or video clip, for more details; please refer to “To take pictures and video clips”.
- (2) Click **[Menu → Use as Home Screen]**.

- (3) Select the display area and click **<Next>**.
- (4) Adjust the transparency. Select a higher percentage for a more transparent picture, or a lower percentage for a more opaque picture.
- (5) Click **<Finish>**.

### To edit the captured photo or video clips

- (1) First, take a picture or video clip, for more details; please refer to “To take pictures and video clips”.
- (2) Click **[Menu → Edit]**, and do any of the following:
  - ❖ To rotate a picture 90 degrees, click **[Menu → Rotate]**.
  - ❖ To crop a picture, click **[Menu → Crop]**. Then, drag the cursor to position it on the first corner of the cropping area, and click **<Next>**. Select the second corner with the

area to crop and click **<Finish>**, or click **<Previous>** to go back to the previous screen and select again.

- ❖ To auto-adjust the brightness and contrast levels of a picture, click **[Menu → Auto Correct]**.
- ❖ Click **[Menu → Save As]** to save the edited picture with a new name or at a new location.

### *N.B.*

*To undo an edit, click [Menu → Undo]. To cancel all unsaved edits you made to the picture, click [Menu → Cancel].*

### To delete the captured photo or video clips

- (1) First, take a picture or video clip, for more details, please refer to “To take pictures and video clips”.
- (2) Click **[Menu → Delete]**.

## Using Multimedia

---

### To view the stored photos and videos

- (1) First, take a picture or video clip, for more details; please refer to “To take pictures and video clips”.
- (2) The captured photos or video clips will be saved to **[File Explorer]** automatically. Enter the **[File Explorer]** to view the stored photos or videos.
- (3) To view the photos and videos stored in the storage card, enter **[File Explorer]** and click **[Menu → Storage Card]**.



### Using pictures&videos

---

The Pictures & Videos program allows you to view pictures and play GIF animation files and video clips on your phone. You can also view the pictures as a slide show, beam them, send them via a messaging program, edit them, or set them as the background on the Home Screen.

### To view pictures

- (1) On the Home screen, click **[Start → More → Pictures&Videos]**. The images in the My Pictures folder appear as thumbnails by default.
- (2) Select a picture and click **<View>**. If you cannot find a picture in the default My Pictures folder, click **[Menu → Folders → My Device]** to go to other folders.

### To view the pictures in slide show

You can view your pictures as a slide show on your phone. Pictures are shown in full-screen view with five-second intervals between slides.

- (1) On the Home screen, click **[Start → More → Pictures&Videos]**.
- (2) Click **[Menu → Play Slide Show]**.

*N.B.*

*You can specify how pictures are scaled to optimise their display in a slide show. Click [Menu*

→Options], select [Slide Show], and choose either [Portrait pictures] or [Landscape pictures]. You can even set your phone to play a screensaver on its monitor while your phone is connected to the PC and idle for 2 minutes.

### To play videos

- (1) On the Home screen, click [Start→More→Pictures&Videos]. Video files appear as thumbnails with an



icon

- (2) Select a video and click <Play> to play it with the built-in Windows Media Player.

### To edit a picture

You can rotate, crop and adjust the brightness and colour contrast of your pictures.

- (1) On the Home screen, click [Start→More→Pictures&Videos].

- (2) Select the picture you want to edit, click <View>.

- (3) Click [Menu →Edit], and do any of the following:

- ❖ To rotate a picture 90 degrees, click [Menu → Rotate].

- ❖ To crop a picture, click [Menu → Crop]. Then, drag the cursor to position it on the first corner of the cropping area, and click <Next>. Select the second corner with the area to crop and click <Finish>, or click <Previous> to go back to the previous screen and select again.

- ❖ To auto-adjust the brightness and contrast levels of a picture, click [Menu →Auto Correct].

- ❖ Click [Menu → Save As] to save the edited picture with a new name or at a new location.

*N.B.*



## Using Multimedia

---

*To undo an edit, click [Menu → Undo]. To cancel all unsaved edits you made to the picture, click [Menu → Cancel].*

### To delete a picture or video clip

- (1) On the Home screen, click **[Start→More→Pictures&Videos]**.
- (2) Select a picture or video clip on the Pictures & Videos screen, and click **[Menu → Delete]**. Click **<Yes>** to confirm the deletion.

### To set a picture as Home Screen

- (1) On the Home screen, click **[Start→More→Pictures&Videos]**.
- (2) Select the picture you want to set as the background.
- (3) Click **<View>**.
- (4) Click **[Menu → Use as Home Screen]**.

- (5) Select the display area and click **<Next>**.
- (6) Adjust the transparency. Select a higher percentage for a more transparent picture, or a lower percentage for a more opaque picture.
- (7) Click **<Finish>**.

### To send pictures and video clips via MMS or Email

You can send pictures and video clips to other phones via email.

- (1) First, set up Messaging to send and receive messages.
- (2) On the Home screen, click **[Start→More→Pictures&Videos]**.
- (3) On the Pictures & Videos screen, select the item you want to send.
- (4) Click **[Menu → Send]**.

- (5) On the Messaging screen, select **[MMS]** or **[Outlook E-mail]** then click **<Select>**.
- (6) A new message is created with the item attached.
- (7) Enter the recipient name and subject, and click **<Send>**. The message will be sent the next time you synchronise your phone.

*N.B.*

*Pictures and video clips are saved automatically before they are sent.*

### To beam pictures

You can beam a picture to your friends or family by using infrared technology.

- (1) On the Home screen, click **[Start→More→Pictures&Videos]**.
- (2) Select the picture you want to beam.
- (3) Click **[Menu → Beam]**.

- (4) Select the device to which you want to send the picture.

- (5) Click **<Beam>**.

### To set a picture as a contact image

You can assign a picture to a contact so that you can easily identify the contact at any time.

- (1) On the Home screen, click **[Start→More→Pictures&Videos]**.
- (2) Select the picture you want to assign to a contact.
- (3) Click **[Menu → Save to Contact]**.
- (4) Select the contact, and click **<Select>**.



### Playing games

---

This function lets you play two games: Bubble Breaker and Solitaire come with your phone.

To access the Games screen, click **[Start→More→Games]** from the Home screen.


## Using Multimedia

---

### Using Java

---

Java-based applications (MIDlet files) can be run on your phone. Your phone supports Java 2 Edition, J2ME. Java allows you to download MIDlet files, such as games and tools that are specifically designed for mobile devices. Java gives you the flexibility of installing and managing additional J2ME applications from the Internet.

On the Home screen, click [**Start→More→Java**] and press the center of the Navigation Key  to enter the Java application screen.

If you haven't installed any Java games on your phone, the phone screen will display "**No applications installed**". Whereas if there has existed some java games on your phone, all stored games will be shown on the screen, so you can select your desired game and click <Run> to run it.

### To manage Java programs

- (1) On the Home screen, click [**Start→More→Java**].
- (2) Select a Java MIDlet and click [**Menu→Application**] to delete, set permission or view the detail for the current Java program.

### To view information about Java program

- (1) On the Home screen, click [**Start→More→Java**].
- (2) Select a Java MIDlet and click [**Menu→Java Info**] to view some information about the current Java program.

### To select the network type

- (1) On the Home screen, click [**Start→More→Java**].


- (2) On the Java Apps screen, click [**Menu** → **Java Settings**].
- (3) In [**Select Network**], select the desired network by using the NAVIGATION control.
- (4) Click <**OK**>.

## 12. Using Bluetooth


Bluetooth is a short-range wireless communications technology. Devices with Bluetooth capabilities can exchange information over a distance of about 10 meters without requiring a physical connection. You can even beam information to a device in a different room, as long as it is within the Bluetooth signal coverage range.


### Turning Bluetooth on or off

You can enable Bluetooth by clicking the On/Off switch in Comm Manager. You can also do the following:

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Bluetooth**].
- (2) In [**Turn on Bluetooth**], press the center of the Navigation Key  to activate it. A “✓” symbol will appear before the option. Your phone can now receive the

connection request of all Bluetooth-enabled devices.

- (3) Click **<Done>**.
- (4) To turn off Bluetooth capabilities on your phone, In [**Turn on Bluetooth**], press the center of the Navigation Key  again.

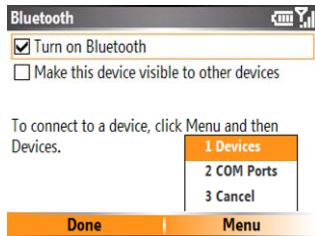


### Making your phone discoverable

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Bluetooth**].

## Using Bluetooth

---

- (2) In **[Make this device visible to other device]**, press the center of the Navigation Key  to activate it. A “✓” symbol will appear before the option.
- (3) Click **<Done>**.

*N.B.*

*Selecting the [Make this device visible to other device] option on the Bluetooth screen also turns on Bluetooth.*



### Connecting a Bluetooth device to your phone

---

A Bluetooth partnership is a relationship that you create between your phone and another Bluetooth-enabled device in order to exchange information in a secure manner.

Creating a partnership between two devices involves entering the same personal identification number (PIN) on both devices, and this is a one-time process. Once a

partnership is created, the devices can recognise the partnership and exchange information without entering a PIN again. Make sure the two devices are within a range of 10 metres, and Bluetooth is turned on and in discoverable mode.

### To search Bluetooth devices

- (1) On the Home screen, click **[Start → Settings → Connections → Bluetooth]**.
- (2) Press the Right Soft Key **\*\*\* <Menu>** and click **[Menu→Devices]** to enter the Bluetooth devices screen.
- (3) On the Bluetooth Device screen, click **[Menu→Add new device]**.
- (4) The system begins to search for Bluetooth devices within 10 meters, as detailed in the following image.



### To match the found device

- (1) After the phone has searched for other Bluetooth-enabled devices and lists them, you can select your desired device name in the list. Click **<Next>** and enter a passcode (the passcode must be between 1 and 16 characters long), then click **<Next>** to establish a secure connection
- (2) Wait for the paired device to accept the partnership.

- (3) On your phone, a message will appear, indicating that your phone has connected with the paired device. Click **<OK>**.

The name of the paired device is then displayed. You may edit and enter a new name for that device and the devices which have created partnership with your phone will be saved in “Add Devices” list.

### To accept a Bluetooth partnership

- (1) Ensure that Bluetooth is turned on and in discoverable mode.
- (2) Click **<Yes>** when prompted to establish a partnership with the other device.
- (3) Enter a passkey (the same passkey that is entered on the device requesting the partnership) to establish a secure connection. The passkey must be between 1 and 16 characters long.
- (4) Click **<Next>**.

## Using Bluetooth

---

- (5) A message will appear indicating that your phone has connected with the paired device. Click **<OK>**.
- (6) The name of the paired device is then displayed. You may edit and enter a new name for that device, then click **<Next>**.
- (7) Select the check boxes of services that you want to use from the paired device.
- (8) Click **<Done>**. You can now exchange information with the other device.

### To change the display name of a bluetooth device

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Bluetooth**].
- (2) Click [**Menu**→**Devices**].
- (3) Select a detected Bluetooth device.
- (4) Click [**Menu** → **Edit**].

- (5) Enter a new display name for the Bluetooth device, then click **<Next>**.
- (6) Click **<Done>**.

### To delete a bluetooth device

- (1) On the Home screen, click [**Start** → **Settings** → **Connections** → **Bluetooth**].
- (2) Click [**Menu** → **Devices**].
- (3) Select a Bluetooth device.
- (4) Click [**Menu**→ **Delete**].
- (5) Click **<Done>**.



### Connecting a Bluetooth earphone to your phone

---

For handsfree phone conversations, you can use a Bluetooth handsfree headset such as a car kit with your phone.





- (1) Set Bluetooth on your phone to discoverable mode. For information about this, see “Making your phone discoverable” on page 127.
- (2) Create a Bluetooth partnership, for more information about this, see “To search To search bluetooth devices” and “To match the found device” on page 127. After matching successfully, the following screen appears:




### ***N.B***

***1. For the above screen, each Bluetooth earphone device will have a different display name.***

***2. You need to enter a passcode when connecting to a Bluetooth handsfree or stereo headset. The passcode is fixed and cannot be changed on a Bluetooth headset.***

- (3) Click **[Menu→Set as Hands-free]**, then you can make a call via the Bluetooth earphone and the icon  will appear on the Home Screen.
- (4) While click **[Menu→ Set as Wireless Stereo]**, then you can enter **[Windows Media]** to select the desired file to play via the Bluetooth stereo. You can also use the Bluetooth earphone to listen to the audio file. The icon  will appear on the Home Screen.

### ***N.B***

***If you choose [Set as Hands-free] and [Set as Wireless Stereo] simultaneously, the icon  will appear in standby mode.***

## Using Bluetooth

---



### Sending files via Bluetooth

---

- (1) Set Bluetooth on your phone to discoverable mode. For information about this, see “Making your phone discoverable” on page 127.
- (2) Create a Bluetooth partnership, for more information about this, see “To search To search bluetooth devices” and “To match the found device” on page 127.
- (3) On the Home screen, click **[Start→More→File Explorer]**.
- (4) Select a file you want to send and click **[Menu→Beam]**.
- (5) Select the device name to which you want to beam.
- (6) Click **<Beam>**.


While establishing the FTP link between other Bluetooth-enabled devices and your phone, the system will prompt you whether or not to save a

file to the phone. If you click **<OK>**, the other Bluetooth-enabled devices can visit any folder in **[File Explorer]** of your phone and you can send files to another matching device as well.



### Receiving files via Bluetooth

---

- (1) Set Bluetooth on your phone to discoverable mode. For information about this, see “Making your phone discoverable”.
- (2) On the Home screen, click **[Start → Settings → Connections → Beam]**.
- (3) In **[Receive incoming beams]**, press the center of the Navigation Key  to activate it, and the “✓” symbol appears.
- (4) Click **<Done>** and you can receive files from another Bluetooth-enabled device. The received files (images or audio) will be saved in the **[File Explorer→Bluetooth]** folder.

### 13. Phone Maintenance

Mobile phones are very exact electronic devices and must be looked after carefully. The following advice can help you to look after your phone and prolong its life.

- ❖ The phone and its spare parts should be put out of the reach of children.
- ❖ Keep the phone dry. Rain, moisture or water will corrupt its electronic circuitry. If your phone does get wet, remove the battery immediately and take the phone to the nearest authorized service center.
- ❖ Don't put the phone in dusty places or this will affect the everyday use of the phone.
- ❖ LCD is a part of the phone which could be easily damaged, so try to avoid dropping the phone on the ground or any other form of shock. Do not touch the screen with a sharp object.
- ❖ Don't put the phone in a high temperature environment. High temperatures will shorten the life of electronic devices, destroy the battery and destroy or melt a phone's plastic shell.
- ❖ Don't put the phone in a low temperature environment. Otherwise, when the temperature rises to normal temperature, there will be moisture in the phone and this will destroy the phone's electronic circuitry.
- ❖ Don't throw, knock or shake the phone intensely as this could damage the electronic circuitry and structure of the phone.
- ❖ Use soft cloth with soap water to clean the phone. Do not use rough chemical or abrasive cleaners to clean the phone as these could damage the phone.
- ❖ Don't paint your phone, for fear the parts which can be taken down will be pasted and affect its normal use.

## Phone Maintenance

---


- ❖ Please use a clean, soft cloth to clean the camera lens etc.
- ❖ If you have to replace the phone's antenna, please only do so with a suitable replacement. Using an unsuitable antenna or spare parts will damage the phone and radio system.

### 14. Troubleshooting

Please check to see if any problems you have encountered while using your phone are described below. If you were unable to find the solution to a particular problem, please contact one of our maintenance centres.



#### The phone can't be switched on

Possible reason	Solution
You are not holding down the Power Key  for long enough	Press and hold for at least 2 seconds.
The battery power is used up	Charge the battery

Incorrect battery installation	Install battery correctly
--------------------------------	---------------------------



#### The phone is switched off automatically

Possible reason	Solution
Low battery power	Charge the battery

## Troubleshooting



### PIN/ PUK code lock

Possible reason	Solution
Enter wrong PIN Code( Personal Identification Code) or PUK Code (Personal Unlocking Key)	Enter correct password

#### ***N.B***

- 1. If you enter an incorrect PIN code three times in succession, many SIM and phone functions will be locked. For more details, please refer to “Safety Precautions”.***
- 2. If you do not know the correct PIN code and PUK code, please contact your operator or network service provider.***



### Bad call quality

Possible reason	Solution
The signal changes suddenly	Maybe you are moving at high-speed (e.g. on a train or bus). Observe the signal strength and select the place with the strongest signal to make a call and ensure better call quality.
The area does not have a good signal	Move to a more open area.




### Can't answer a call

Possible reason	Solution
The call forwarding option has been set	Cancel call forwarding according to requirements.
The call barring option has been set	Cancel the function of incoming call barring or roam incoming call barring.



### Can't make a call

Possible reason	Solution
The phone is switched off	Turn on the phone.

You are outside the network service area	Check the network area.
The SIM card has been incorrectly inserted	Check whether your SIM card can be used normally.
The keypad locks automatically	Press the Left Soft Key <b>...</b> and hold down  to unlock your keypad
Use the phone during call rush hours and cause line jam	Try to avoid using the phone during call rush hours
Call barring has been set	Cancel the call barring option according to your requirements.

## Troubleshooting

### The call volume is too low

Possible reason	Solution
The call volume has been set too low	Increase the call volume.

### The person you are calling cannot hear your voice

Possible reason	Solution
Call status is set to mute	Turn off the mute function on the call menu.
The microphone is too far from the sound source	Put the phone's microphone closer to your mouth.

### The incoming call doesn't ring

Possible reason	Solution
The phone selects silent mode	Reset the ring type in <b>[Profiles]</b> to <b>[Ring]</b> or <b>[Vibrate and Ring]</b> , for more details, refer to "To edit a profile" on page 39.
The ring volume is set too low	Increase the volume
The call forwarding option has been set	Cancel call forwarding according to requirements.





### The battery can't be charged

Possible reason	Solution
The battery is worn out and the charging time takes too long	Charge when the phone prompts low battery.
The battery doesn't connect well to the phone	Ensure the battery has been inserted correctly.
The charger doesn't connect to the phone	Ensure that the interface between the charger and the phone is correctly connected, and the charger icon should appear on the screen.
The battery power is empty,	When the battery power is empty, you mustn't

so charge with USB data cable	charge with USB cable, Use Orange standard charger to charge
Battery or charger has been damaged	Contact one of our maintenance centers.
The surrounding temperature is too low or too high	Make sure the phone is charged in a normal temperature.

## Troubleshooting

### Can't display network

Possible reason	Solution
The SIM card has been incorrectly installed	Refer to the SIM card installation method.
The contact between the SIM card and phone is dirty	Ensure the contact between the SIM card and phone remains clean.
The SIM card does not work	Check whether the SIM card is out of date.
The network is very weak	Move to a place with a strong signal to use the phone



### The phone does not recognize the storage card

Possible reason	Solution
The storage card has been incorrectly inserted	Insert the storage card correctly according to instructions in the user manual.
The storage card has been damaged	Replace the storage card

### Browser can't connect to Internet normally

Possible reason	Solution
The network service provider don't provide the service or you haven't apply for this service	Contact with your network service provider and consult information about how to apply for and use these services
Haven't set correctly	About more details about setting, refer to "Connecting to the Internet" on page 93.

### Lack of space

Possible reason	Solution
The resource manager file is taking up too much space	Delete unnecessary files.
The browser's history records are taking up too much space	Delete unwanted history records.
Multi-message, e-mail etc. are taking up too much space	Delete unwanted messages and e-mails.

### 15. Safety Precaution

#### Usage environment

---

- ❖ Please remember to obey the necessary rules and regulations whenever use your phone. This will help keep you safe and respect your environment.
- ❖ Switch off your phone when close to petrol stations, bunkers, chemical factories or explosive areas and adhere to any safety signs and instructions there. Breaking any rules may cause explosion or injury.
- ❖ Using the phone in plane can cause interference and danger to an aircraft navigation system and network. You must switch off your phone before boarding and make sure your phone is switched off during the whole flight.
- ❖ Please place the phone somewhere safe and don't put it on a seat or in places where it

could fall and break. In order to ensure safe driving and avoid road accidents, please don't use the phone when driving. If you must use it, please use the phone's hands-free or park at roadside before making or answering a call.

#### Medical devices

---

Please switch off your phone in areas near the electronic medical equipments that obviously desire to switch your phone off (.such as heart pacemakers, hearing aids etc). Most medical devices can shield the phone's RF signal, but some can't. If you have any questions or need to find out more, please consult your doctor or medical device manufacturer.

#### **Pacemaker**

Pacemaker manufacturers advise the distance between your phone and heart pacemaker to be at least 6 inches (15.3 cm), or the phone could interfere with the pacemaker.

### **The personnel who wears pacemaker should do the followings:**

- ❖ ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- ❖ Do not carry the phone in a breast pocket.
- ❖ Use the ear opposite the pacemaker to minimize the potential for interference.
- ❖ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

#### ***N.B***

***If you are unsure as to the level of interference, please switch off the phone at once and consult a doctor immediately.***

### **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such

interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).



### **Emergency calls**

---

As the phone uses a radio signal, wireless and ground communication network and personal settings functions like other phones, it is impossible to ensure your phone can be connected successfully in any situation, so please don't rely purely on your phone as the only means of notification in cases of emergency (such as medical first aid )

### **Making an emergency call**

- (1) If your phone is switched off, please turn on your phone and check whether the network signal is strong enough.
- (2) Input the local first aid number correctly (such as 120), different areas have different first aid numbers.

## Safety Precaution

---

(3) Please press the call key to call.

### **N.B**

*While making an emergency call, you should try to provide all important information correctly. At this time, the phone may be the only communication tool, so don't end the call without permission.*



## Password access

---

Your phone and SIM card can be protected by a password, to prevent others using it illegally.

### **Phone password**

This protects your phone from unauthorised use by other people. The preset password is 0000. After using it, please modify your phone password as soon as possible and keep it secret.

### **PIN code**

This is personal identification code which is used to protect the SIM card from unauthorised use by other people. Generally, the PIN code and SIM card are provided together. After activating the PIN code, you can use the phone normally by correctly inputting your password each time.

### **N.B**

*If you input your PIN code incorrectly three times in succession, the SIM card will be locked. You will need to input the PUK code to unlock it. (If you don't have a PUK code, please contact your operator and SIM card provider for this information. Please input all characters).*

### **PIN2 code**

This is the password which activates the special SIM card functions. Usually, the PIN2 code and the SIM card will be provided together. If you incorrectly input the PIN2 code three

times in succession, it will be locked and you will need to input PUK2 to unlock it again.

### PUK code

This is used to unlock the PIN code. If you incorrectly input the PUK code ten times in succession, then the SIM card cannot be used again. Usually the PUK code and SIM card are provided together. If you lose PUK code or it isn't supplied with SIM card, please contact with your network operator or SIM card provider.

### PUK2 code

This is used to unlock the PIN2 code. Usually the PUK2 code and the SIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code ten times in succession, you will not be able to access some of the functions. Please apply to your operator for a new card. The PUK2 code cannot be changed. If you lose it, please contact your service provider.



### Note about charging the battery

---

The phone provides power by using a lithium battery. The standby time and call time will be influenced by the system's environment and phone settings.

- ❖ Please use the battery and charger provided by the Orange Company. Orange will take no responsibility for damage caused by using the wrong battery or charger.

#### *N.B*

*Generally, the charging time is 2-5 hours according to the current status of the phone (whether switch on the phone, make a call etc)*

- ❖ Don't use wet hands to touch the phone battery or charger while charging.

#### *N.B*

*To make the new battery achieve the best capacity, please charge and discharge the phone for twice or three times. As for the first several times, you*

## Safety Precaution

---

*should charge the battery for at least 10 hours in succession. Please charge the phone due to no power and switch off the phone automatically.*



### Battery information and care

---

- ❖ Never use any battery that has been damaged.
- ❖ While using the phone near network station, the power consumption is very little. Therefore, the call and standby time depends on greatly by the signal strength of honeycomb network and the parameters set by network operator.
- ❖ The battery charging time will depend on the amount of electricity remaining and the type of battery and charger used. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- ❖ Only use batteries that are compatible with your phone and only recharge your battery with a compatible charger. If a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, as overcharging may shorten its life.
- ❖ Improper battery use may result in a fire, explosion or other hazard. Do not disassemble or open, crush, bend or deform, puncture or shred the battery.
- ❖ Do not connect the anode and cathode of a battery the wrong way round.
- ❖ Do not leave the battery in places with too high or too low temperature or the battery capacity will be reduced and battery life will be shortened. Always try to keep the battery at room temperature.
- ❖ Do not short-circuit the battery. This may damage the electronic core or the protected circuit inside the battery. Accidental short-circuiting may occur when a metal



object (coin, clip or pen) causes a direct connection between the anode and cathode of the battery, for example when you carry a spare battery in a pocket or bag.

Short-circuiting the terminals may damage the battery or the object causing the short-circuiting. Therefore, please store the battery carefully and on its own.

- ❖ Don't burn your phone battery or treat it as common rubbish. Please adhere to the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries in time.
- ❖ If your phone, battery or other charging device leaks due to carelessness, you must not put it inside any piece of equipment that heats up (such as drier, microwave etc.). The phone or other products may go wrong, or this could even cause the phone, battery or other charging device to burn, expand and explode.
- ❖ Please deal with the useless old battery

according to the relative introduction.

Orange will take no responsibility for any direct or indirect damage caused by user error.



### **Note about using spare parts**

---

- ❖ Please put all spare parts (such as SIM card, storage card, battery etc) out of reach of children, in case danger occurs.
- ❖ Please do switch off the phone and disconnect the phone and charger before you removing the battery from the phone.
- ❖ As the phone's spare parts are not waterproof, please keep all spare parts dry.
- ❖ You should pull out the plug of any spare part correctly when you switch off the power, don't drag the power line forcibly.

If the phone, battery, and charger don't operate normally, ally, please contact one of our maintenance centres with a qualified repair service as soon as possible.

## Safety Precaution

---



### Other safety information

---

- ❖ When you are not using your phone, it is advisable to switch it off, remove the battery to save energy and avoid radicalising the phone.
- ❖ If you use earphones to listen to music or watch a film, please don't turn the volume up too high as this could damage your hearing.
- ❖ You can't disassemble the terminal and battery of the phone unless the technical personnel.

### SAR Information

This phone meets European Union (EU) requirements concerning exposure to radio waves. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 1.6W/kg.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

The SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

The E610 has been designed to comply with

## SAR Information

---

the standards and procedures.

For mobile telephones described in CENELEC European Standard (EN50360-2001; EN 50361-2001).

The SAR values for this model tested by (Telecommunication Metrology Centre of Ministry of Information Industry) is below 0.365 W/KG when in GSM900 and below 0.508 W/KG when in GSM1800.

## Index

### -A-

#### **ActiveSync, 58**

Install software, 64

Solve connection problems, 65

Set up, 59

Start and stop, 60

#### **Additional dialing information, 34**

### -B-

#### **Battery charging, 20**

#### **Bluetooth**

Connect a Bluetooth device, 128

Connect a Bluetooth earphone, 131

Make your phone discoverable, 128

Receive files, 133

Send files, 132

Turn on or turn off, 127

### -C-

#### **Call history, 36**

#### **Change**

Accessibility settings, 44

Regional settings, 43

#### **Conference call, 33**

#### **Connection**

Add a URL exception, 96

Set up a connection, 94

Use advanced options, 95

#### **Contacts**

Add, 88

Make a call, 91

## Index

---

Manage, 93  
Search for, 89  
Send text messages,  
or MMS, 91  
Send the contact's  
information, 92  
View and edit, 90

### **Customise**

the tones, 39

### **-E-**

#### **Email**

Individually sign and  
encrypt, 79  
Receive, 78  
Reply and forward,  
78

Set digital signature,  
79  
Set up a  
POP3/IMAP4  
account, 75  
Write and send, 77

### **Enter**

Information, 28  
Menu, 28

### **-H-**

#### **Home Screen, 21**

#### **Hotmail, 86**

### **-I-**

#### **Install**

Micro-SD card, 19  
SIM card and battery,  
17

#### **Internet Explorer, 96**

#### **Internet sharing, 99**

### **-K-**

#### **Key functions, 14**

### **-M-**

#### **Make call**

Call history, 31  
from contacts, 30  
from Home screen,  
30  
from text messages,

31

Speed dial, 31

### **Manage files, 50**

### **Manage folders, 80**

### **MMS**

Add predefined text,  
73

Configure, 70

View and reply, 74

Write and send, 72

### **Multimedia**

Camera and video  
recorder, 116

Games, 125

Java, 125

Pictures&videos, 121

Video player, 113

Windows media, 107

### **Mute call, 33**

### **-P-**

### **Phone Maintenance, 134**

### **Pocket MSN**

Block or unblock, 85

Change status, 85

Display name, 86

End a chat, 84

Invite another contact,  
84

Send a MSN  
message, 83

Set an account, 82

Sign in, 83

Sign out, 86

### **Power management, 53**

### **Power on/ off, 22**

### **-Q-**

### **Quick List, 27**

### **-R-**

### **Receive a call, 31**

### **Remove programs, 56**

### **Reset your phone, 57**

## Index

---

### **-S-**

**Safety notice, X**

**Safety Precaution,  
143**

### **Set**

Calls, 45

Coonections, 47

Date, time and alarm,  
42

Error reporting, 44

Home screen, 41

Network, 47

Owner information,  
43

**speed dial, 35**

**Status icon and  
program introduction,  
23**

### **-T-**

**Task manager, 52**

**Text messages, 68**

### **Tools**

Calculator, 103

Calendar, 104

Tasks, 102

Voice notes, 105

**Troubleshooting, 136**

### **-V-**

**View the phone and  
system information,  
54**

### **-Y-**

### **Your phone**

Accessories, 13

Front view, 12

Protect, 55

Rear view, 13

Side view, 12